


# PLATE GL

SOFT TOPS AND INSTALLATION  
COMPONENTS

## TRIUMPH TR6

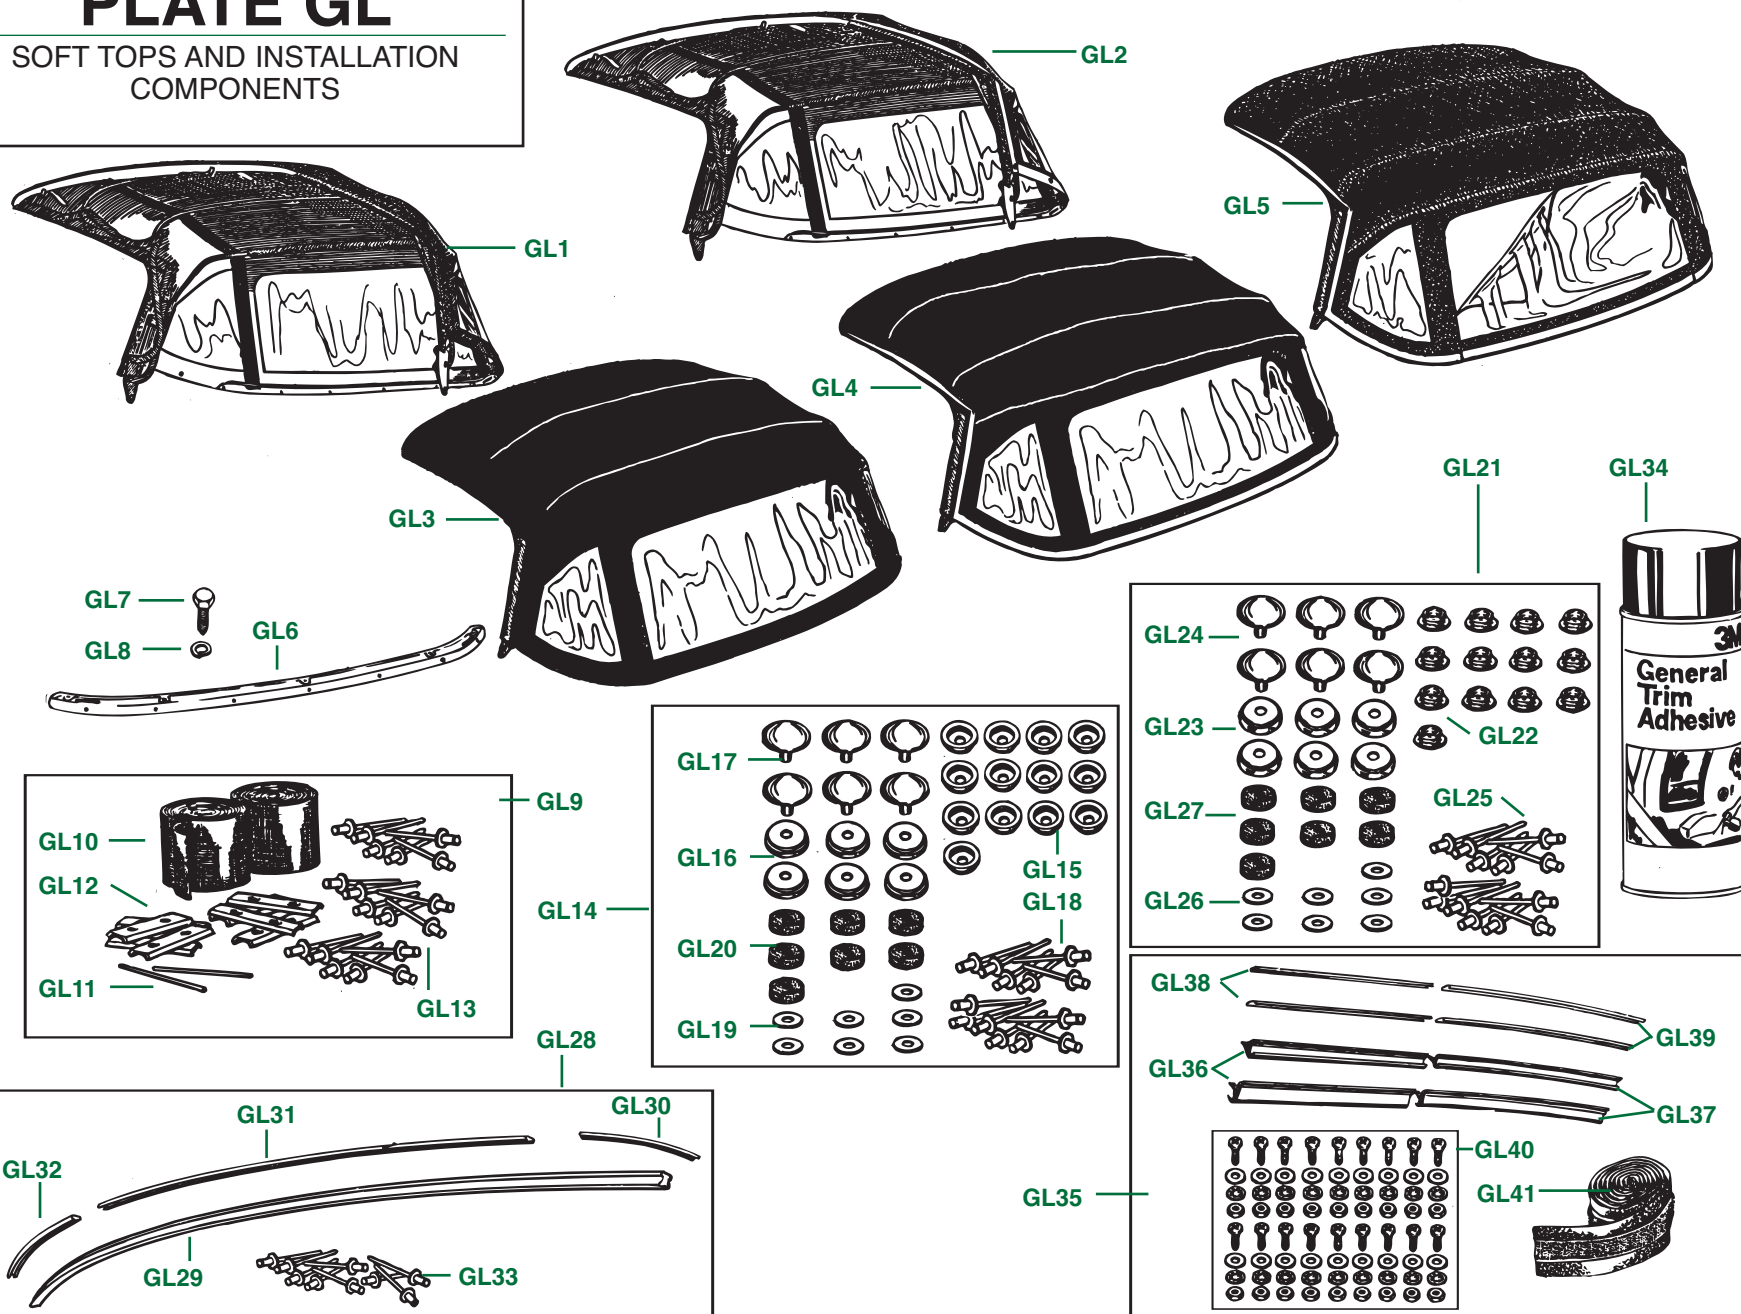

# SOFT TOPS AND INSTALLATION COMPONENTS

Plate No.	Part No.	Description	No. Off
		<b>Please Note:</b> As is our custom, we are listing all of the original factory part numbers for soft tops and soft top and frame assemblies for researchers, although most of these have not been available for years. If you have trouble making up your mind, you can discuss features with a Level II salesperson, and vinyl samples are available upon request.	
		<b>SOFT TOP AND FRAME ASSEMBLIES</b> , original-equipment part numbers	
		<b>SOFT TOP AND FRAME ASSEMBLIES</b> , for all models except U.S.A.; these do not have reflective stripes	
GL1	815571	<b>Soft Top and Frame Assembly</b> , black, fitted up to comm. no. CR1	1
	822011	<b>Soft Top and Frame Assembly</b> , black, fitted after comm. no. CR1	1
	575981	<b>Soft Top and Frame Assembly</b> , black, German models only	1
	815579	<b>Soft Top and Frame Assembly</b> , white, fitted up to comm. no. CR1	1
	575989	<b>Soft Top and Frame Assembly</b> , white, German models only	1
		<b>SOFT TOP AND FRAME ASSEMBLIES</b> , U.S.A. models	
GL2	815621	<b>Soft Top and Frame Assembly</b> , black, fitted up to comm. no. CF1	1
	821981	<b>Soft Top and Frame Assembly</b> , black, fitted after comm. no. CF1	1
	815629	<b>Soft Top and Frame Assembly</b> , white, fitted up to comm. no. CF1	1
		<b>SOFT TOPS—WITHOUT FRAMES</b> , original-equipment part numbers	1
		<b>SOFT TOPS—WITHOUT FRAMES</b> , all models except U.S.A.; these do not include reflective stripes	
GL3	815581	<b>Soft Top</b> , black, fitted up to comm. no. CR1	1
	822021	<b>Soft Top</b> , black, fitted after comm. no. CR1	1
	815589	<b>Soft Top</b> , white, fitted up to comm. no. CR1	1
		<b>SOFT TOPS—WITHOUT FRAMES</b> , U.S.A. models	
GL4	815631	<b>Soft Top</b> , black, with reflective stripes, fitted up to comm. no. CF1	1
	821991	<b>Soft Top</b> , black, with reflective stripes, fitted after comm. no. CF1	1
	815639	<b>Soft Top</b> , white, with reflective stripes, fitted up to comm. no. CF1	1


Plate No.	Part No.	Description	No. Off
		<b>ROBBINS BRAND SOFT TOPS—WITHOUT FRAMES</b>	
		<b>ROBBINS BRAND SOFT TOPS</b> , original-equipment grade	
GL5	RB2220/B	<b>Soft Top</b> , black, with reflective stripes and zip-out rear window	1
	RB2220/W	<b>Soft Top</b> , white, with reflective stripes and zip-out rear window	1
	RB2220/T	<b>Soft Top</b> , tan, with reflective stripes and zip-out rear window	1
	RB2220/Q	<b>Soft Top</b> , bisque, with reflective stripes and zip-out rear window	1
		<b>ROBBINS BRAND SOFT TOPS</b> , standard grade	
	RB2207/AB	<b>Soft Top</b> , black, without reflective stripes, with zip-out rear window	1
	RB2207/AW	<b>Soft Top</b> , white, without reflective stripes; with zip-out rear window	1
	RB2207/AT	<b>Soft Top</b> , tan, without reflective stripes, with zip-out rear window	1
	RB2207/AQ	<b>Soft Top</b> , bisque, without reflective stripes; with zip-out rear window	1
		<b>ROBBINS BRAND SOFT TOPS</b> , economy grade	
	RB2207/B	<b>Soft Top</b> , black, without reflective stripes; without zip-out rear window	1
	RB2207/W	<b>Soft Top</b> , white, without reflective stripes; without zip-out rear window	1
	RB2207/T	<b>Soft Top</b> , tan, without reflective stripes; without zip-out rear window	1
	RB2207/Q	<b>Soft Top</b> , bisque, without reflective stripes; without zip-out rear window	1

(Continued on next page.)

# PLATE GL

SOFT TOPS AND INSTALLATION  
COMPONENTS

## TRIUMPH TR6

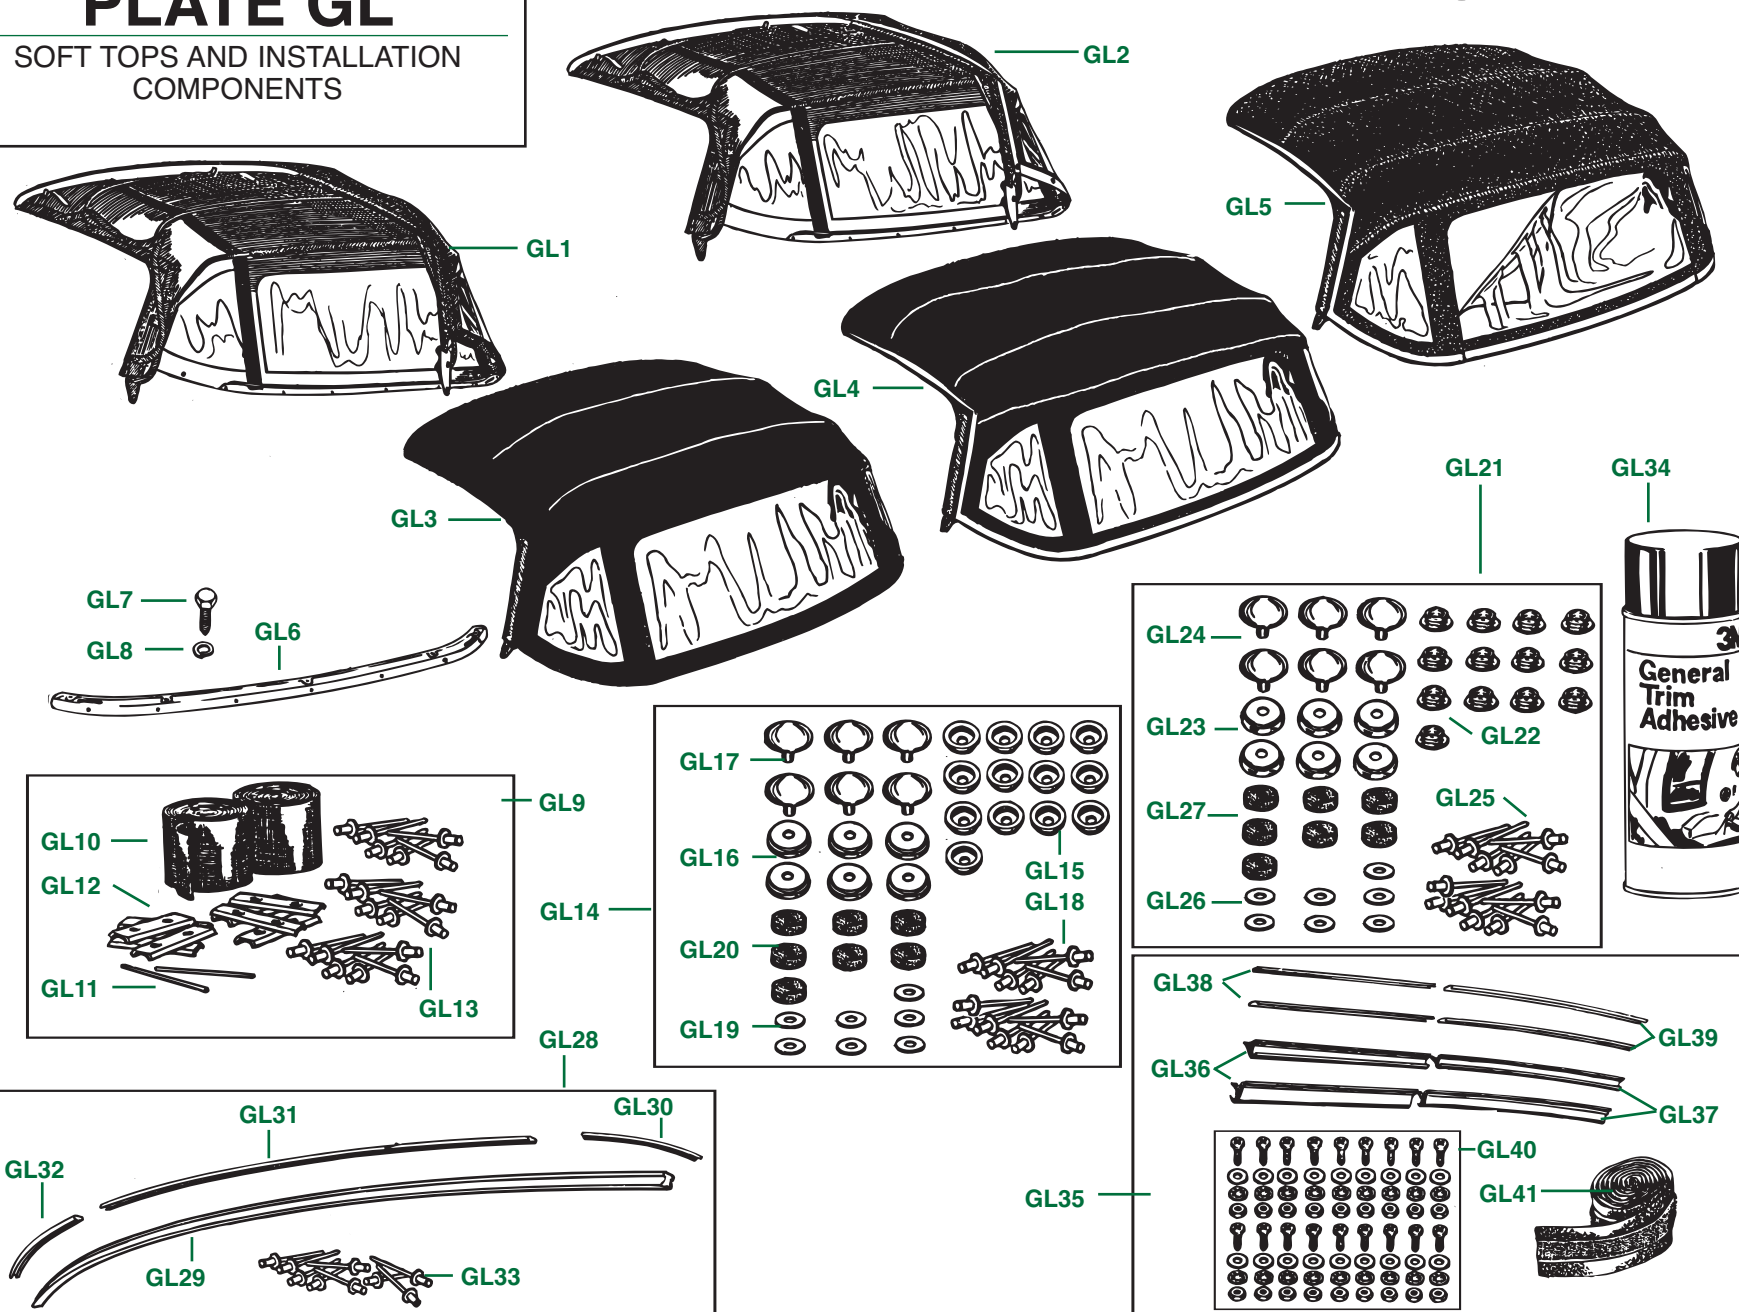

# SOFT TOPS AND INSTALLATION COMPONENTS

Plate No.	Part No.	Description	No. Off
<b>ROBBINS BRAND SOFT TOPS—WITHOUT FRAMES</b>			
—Continued			
<b>TOPS MADE FROM EVERFLEX MATERIAL; WITH REFLECTIVE STRIPING</b>			
	RB2220/EVBLK	<b>Deluxe Top</b> , black, zip—out rear window as original	1
	RB2220/EVBLU	<b>Deluxe Top</b> , blue, zip—out rear window as original	1
	RB2220/EVBSQ	<b>Deluxe Top</b> , khaki tan, zip—out rear window as original	1
	RB2220/EVCRM	<b>Deluxe Top</b> , cream, zip—out rear window as original	1
	RB2220/EVGRN	<b>Deluxe Top</b> , green, zip—out rear window as original	1
	RB2220/EVGRY	<b>Deluxe Top</b> , grey, zip—out rear window as original	1
	RB2220/EVMRN	<b>Deluxe Top</b> , maroon, zip—out rear window as original	1
	RB2220/EVRED	<b>Deluxe Top</b> , red, zip—out rear window as original	1
	RB2220/EVTAN	<b>Deluxe Top</b> , tan, zip—out rear window as original	1
	RB2220/EVWHT	<b>Deluxe Top</b> , white, zip—out rear window as original	1
<b>TOPS MADE FROM EVERFLEX MATERIAL; WITHOUT REFLECTIVE STRIPING</b>			
	RB2220/AEVBK	<b>Standard Top</b> , black, comes with zip—out rear window	1
	RB2220/AEVBLU	<b>Standard Top</b> , blue, comes with zip—out rear window	1
	RB2220/AEVBSQ	<b>Standard Top</b> , khaki tan, comes with zip—out rear window	1
	RB2220/AEVCRM	<b>Standard Top</b> , cream, comes with zip—out rear window	1
	RB2220/AEVGRN	<b>Standard Top</b> , green, comes with zip—out rear window	1
	RB2220/AEVGRY	<b>Standard Top</b> , grey, comes with zip—out rear window	1
	RB2220/AEVMRN	<b>Standard Top</b> , maroon, comes with zip—out rear window	1
	RB2220/AEVRED	<b>Standard Top</b> , red, comes with zip—out rear window	1
	RB2220/AEVTAN	<b>Standard Top</b> , tan, comes with zip—out rear window	1
	RB2220/AEVWHT	<b>Standard Top</b> , white, comes with zip—out rear window	1


Plate No.	Part No.	Description	No. Off
<b>ROBBINS BRAND SOFT TOPS—WITHOUT FRAMES</b>			
—Continued			
<b>TOPS MADE FROM SUNFAST CANVAS MATERIAL; CORRECT REFLECTIVE STRIPING</b>			
	RB2220/SFBLK	<b>Deluxe Top</b> , black, zip—out rear window as original	1
	RB2220/SFBLU	<b>Deluxe Top</b> , blue, zip—out rear window as original	1
	RB2220/SFBRN	<b>Deluxe Top</b> , brown, zip—out rear window as original	1
	RB2220/SFCHR	<b>Deluxe Top</b> , charcoal, zip—out rear window as original	1
	RB2220/SFDWD	<b>Deluxe Top</b> , driftwood, zip—out rear window as original	1
	RB2220/SFGRY	<b>Deluxe Top</b> , grey, zip—out rear window as original	1
	RB2220/SFRDB	<b>Deluxe Top</b> , redberry, zip—out rear window as original	1
	RB2220/SFSND	<b>Deluxe Top</b> , sand, zip—out rear window as original	1
	RB2220/SFTAN	<b>Deluxe Top</b> , tan, zip—out rear window as original	1
<b>TOPS MADE FROM SUNFAST CANVAS MATERIAL; WITHOUT REFLECTIVE STRIPING</b>			
	RB2207/ASFBK	<b>Standard Top</b> , black, comes with zip—out rear window	1
	RB2207/ASFBLU	<b>Standard Top</b> , blue, comes with zip—out rear window	1
	RB2207/ASFBRN	<b>Standard Top</b> , brown, comes with zip—out rear window	1
	RB2207/ASFCHR	<b>Standard Top</b> , charcoal, comes with zip—out rear window	1
	RB2207/ASFDWD	<b>Standard Top</b> , driftwood, comes with zip—out rear window	1
	RB2207/ASFGRY	<b>Standard Top</b> , grey, comes with zip—out rear window	1
	RB2207/ASFRDB	<b>Standard Top</b> , redberry, comes with zip—out rear window	1
	RB2207/ASFSND	<b>Standard Top</b> , sand, comes with zip—out rear window	1
	RB2207/ASFTAN	<b>Standard Top</b> , tan, comes with zip—out rear window	1

(Continued on next page.)

# PLATE GL

SOFT TOPS AND INSTALLATION  
COMPONENTS

## TRIUMPH TR6

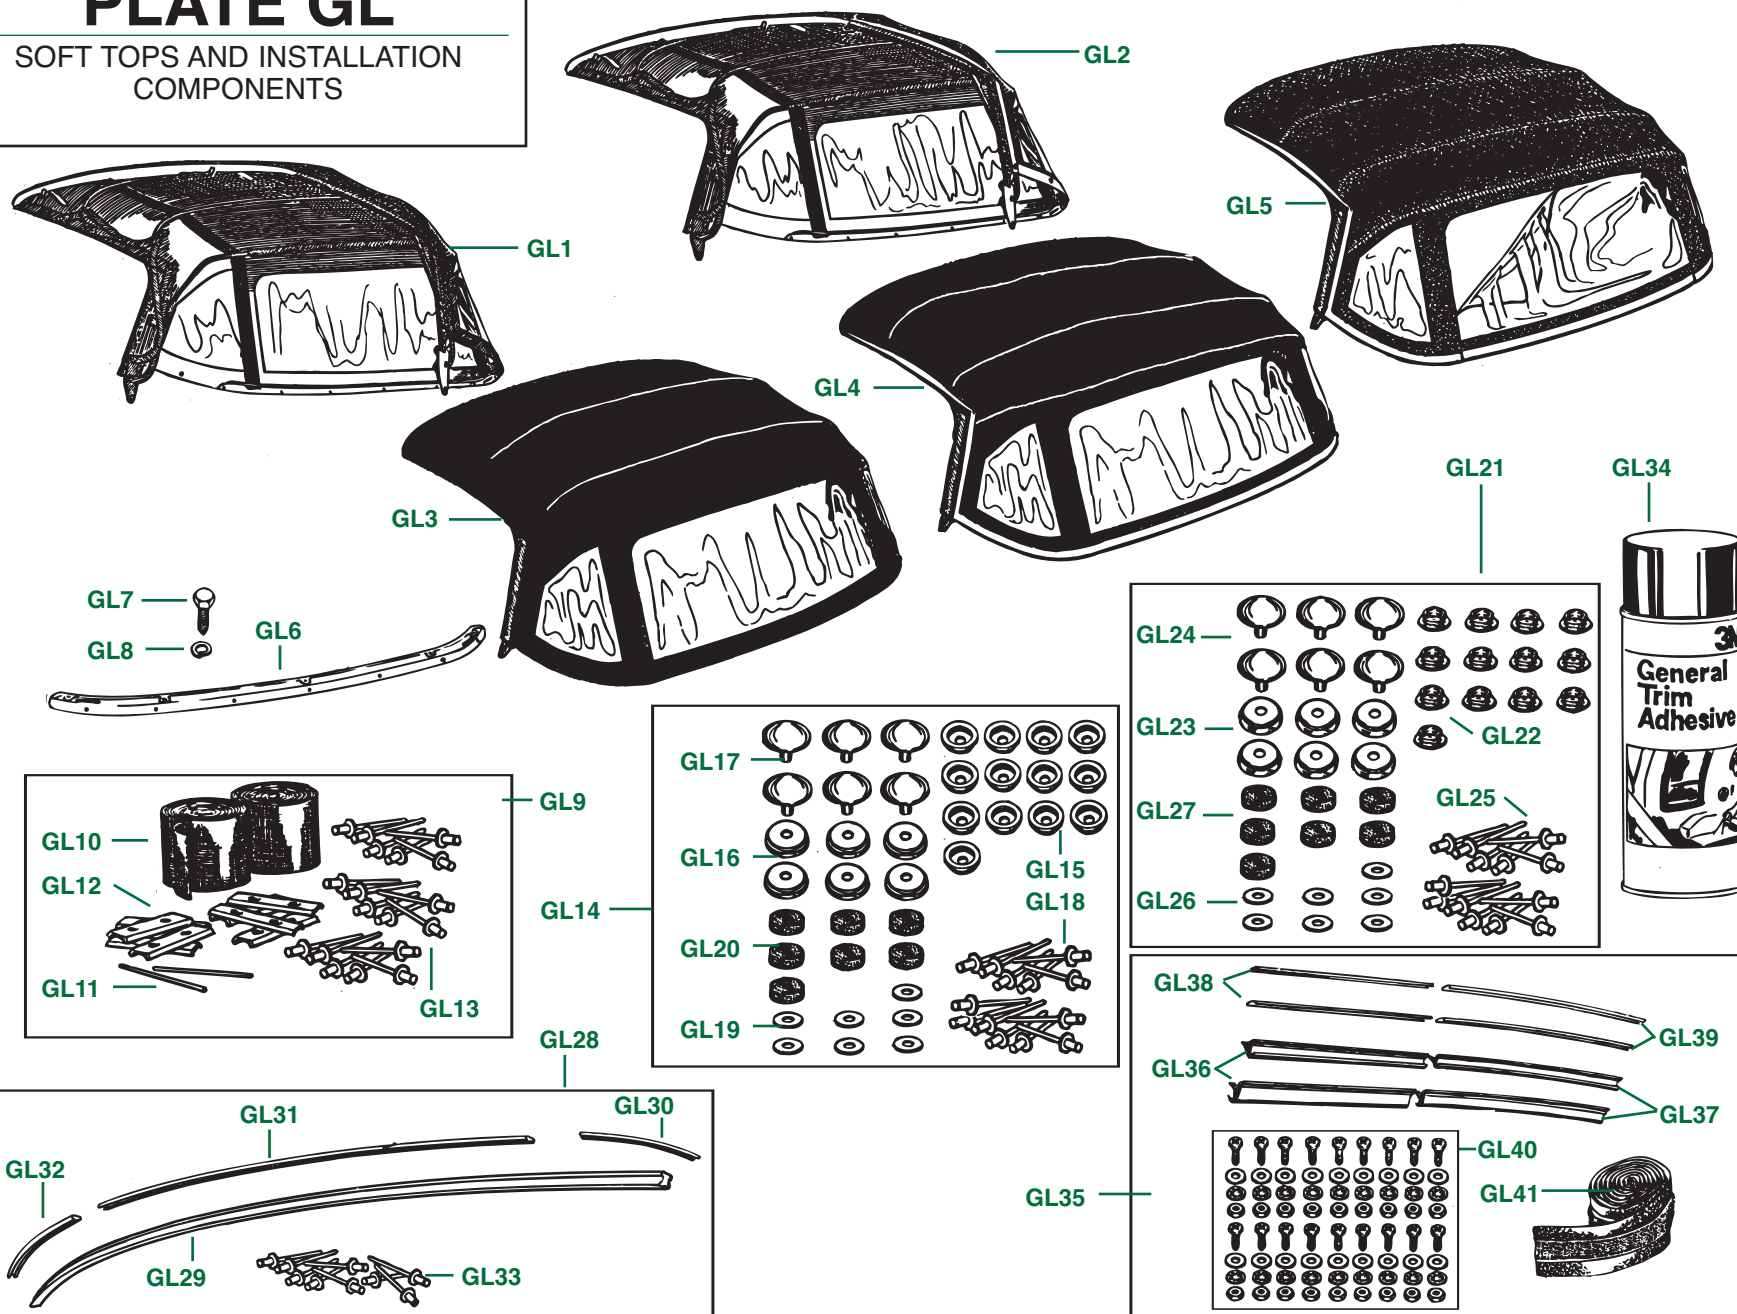



# SOFT TOPS AND INSTALLATION COMPONENTS

Plate No.	Part No.	Description	No. Off
		<b>HARDWARE AND INSTALLATION COMPONENTS</b> , securing soft tops to soft-top frames and to the car	
GL6	812832	<b>Angle</b> , rear stiffening	1
		<b>HARDWARE</b> , securing rear stiffening angle to rear deck of car	
GL7	506185	<b>Screw</b> , set	5
GL8	WL207	<b>Washer</b> , lock	5
GL9	RFK722	<b>WEBBING AND PLATE KIT</b> , soft top frame	1
GL10	631970	<b>Webbing Strip</b>	2
GL11	571097	<b>Retainer</b> , wire, securing webbings to rear stiffening angle	2
GL12	602030	<b>Plate</b> , securing webbings to soft top frame	8
GL13	554407	<b>Rivet</b> , Imex, securing plates to soft top frame	16
GL14	RFK427	<b>FASTENER KIT</b> , black, original-type plastic snaps and fittings	1
GL15	713511	<b>Stud</b> , male snap component, black,	13
GL16	713501	<b>Socket</b> , female snap component, black	6
GL17	ZKC751	<b>Button</b> , outer snap component, black	6
GL18	554407	<b>Rivet</b> , Imex, securing studs to car body and to rear stiffening angle	13
GL19	509563	<b>Washer</b> , backing, fitted to rivets which secure snap studs to rear stiffening angle	7
GL20	631771	<b>Pad</b> , paint protection, cemented to ends of rivets on underside of rear stiffening angle	7
	RFK1513	<b>FASTENER KIT</b> , white, original-type plastic snaps and fittings	1
	713519	<b>Stud</b> , male snap component, white	13
	713509	<b>Socket</b> , female snap component, white	6
	713499	<b>Button</b> , outer snap component, white	6
	554407	<b>Rivet</b> , Imex, securing studs to car body and to rear stiffening angle	13
	509563	<b>Washer</b> , backing, fitted to rivets which secure snap studs to rear stiffening angle	7
	631771	<b>Pad</b> , paint protection, cemented to ends of rivets on underside of rear stiffening angle	7
GL21	RFK724	<b>FASTENER KIT</b> , nickel-plated metal components; these are not original-equipment specification	1
GL22	565746	<b>Stud</b> , male snap component, metal	13
GL23	565642	<b>Socket</b> , female snap component, metal	6
GL24	565747	<b>Button</b> , outer snap component, metal	6
GL25	554407	<b>Rivet</b> , Imex, securing studs to car body and to rear stiffening angle	13
GL26	509563	<b>Washer</b> , backing, fitted to rivets which secure snap studs to rear stiffening angle	7
GL27	631771	<b>Pad</b> , paint protection, cemented to ends of rivets on underside of rear stiffening angle	7


Plate No.	Part No.	Description	No. Off
		<b>HARDWARE AND INSTALLATION COMPONENTS</b> —Continued	
GL28	RFK490	<b>HEADER RAIL SEAL AND CHANNEL KIT</b>	1
GL29	616187	<b>Seal</b> , rubber, header rail to windscreen capping	1
		<b>CHANNELS</b> , securing seal to soft top frame	
GL30	713037	<b>Channel</b> , L.H.	1
GL31	713036	<b>Channel</b> , center	1
GL32	713038	<b>Channel</b> , R.H.	1
GL33	568515	<b>Rivet</b> , Imex, securing channels to windscreen frame	9
GL34	TRFC101	<b>Spray Adhesive</b> , 3M brand for centering front edge of soft top to header rail prior to riveting channels into place	1
		<b>ROOF SIDE RAIL SEAL AND CHANNEL KIT</b>	
GL35	RFK491	<b>Seal</b> , rubber, roof side, front	1
GL36	621273	<b>Seal</b> , rubber, roof side, rear	2
GL37	621274	<b>Channel</b> , aluminium, front	2
GL38	621281	<b>Channel</b> , aluminium, rear	2
GL39	712400	<b>HARDWARE KIT</b> , securing channels to soft top frame	1
GL40	RFK492	<b>Screw</b> , set	18
	517140	<b>Washer</b> , plain	18
	517139	<b>Washer</b> , shakeproof	18
	517138	<b>Nut</b>	18
	517171	<b>Velcro Kit</b> , covering soft top frame above door windows, uprated version of original-equipment	1
GL41	VS56		

**PLEASE NOTE:** Metal fasteners are supplied with both AMCO and Robbins brand soft tops, although this was not the original Triumph fitment. Snaps are installed on AMCO tops but supplied loose with Robbins tops. For those who wish to use the original plastic snaps, we list complete snap and fastener kits in this section.

# PLATE GM

CONVERTIBLE TOP FRAME DETAILS

## TRIUMPH TR6

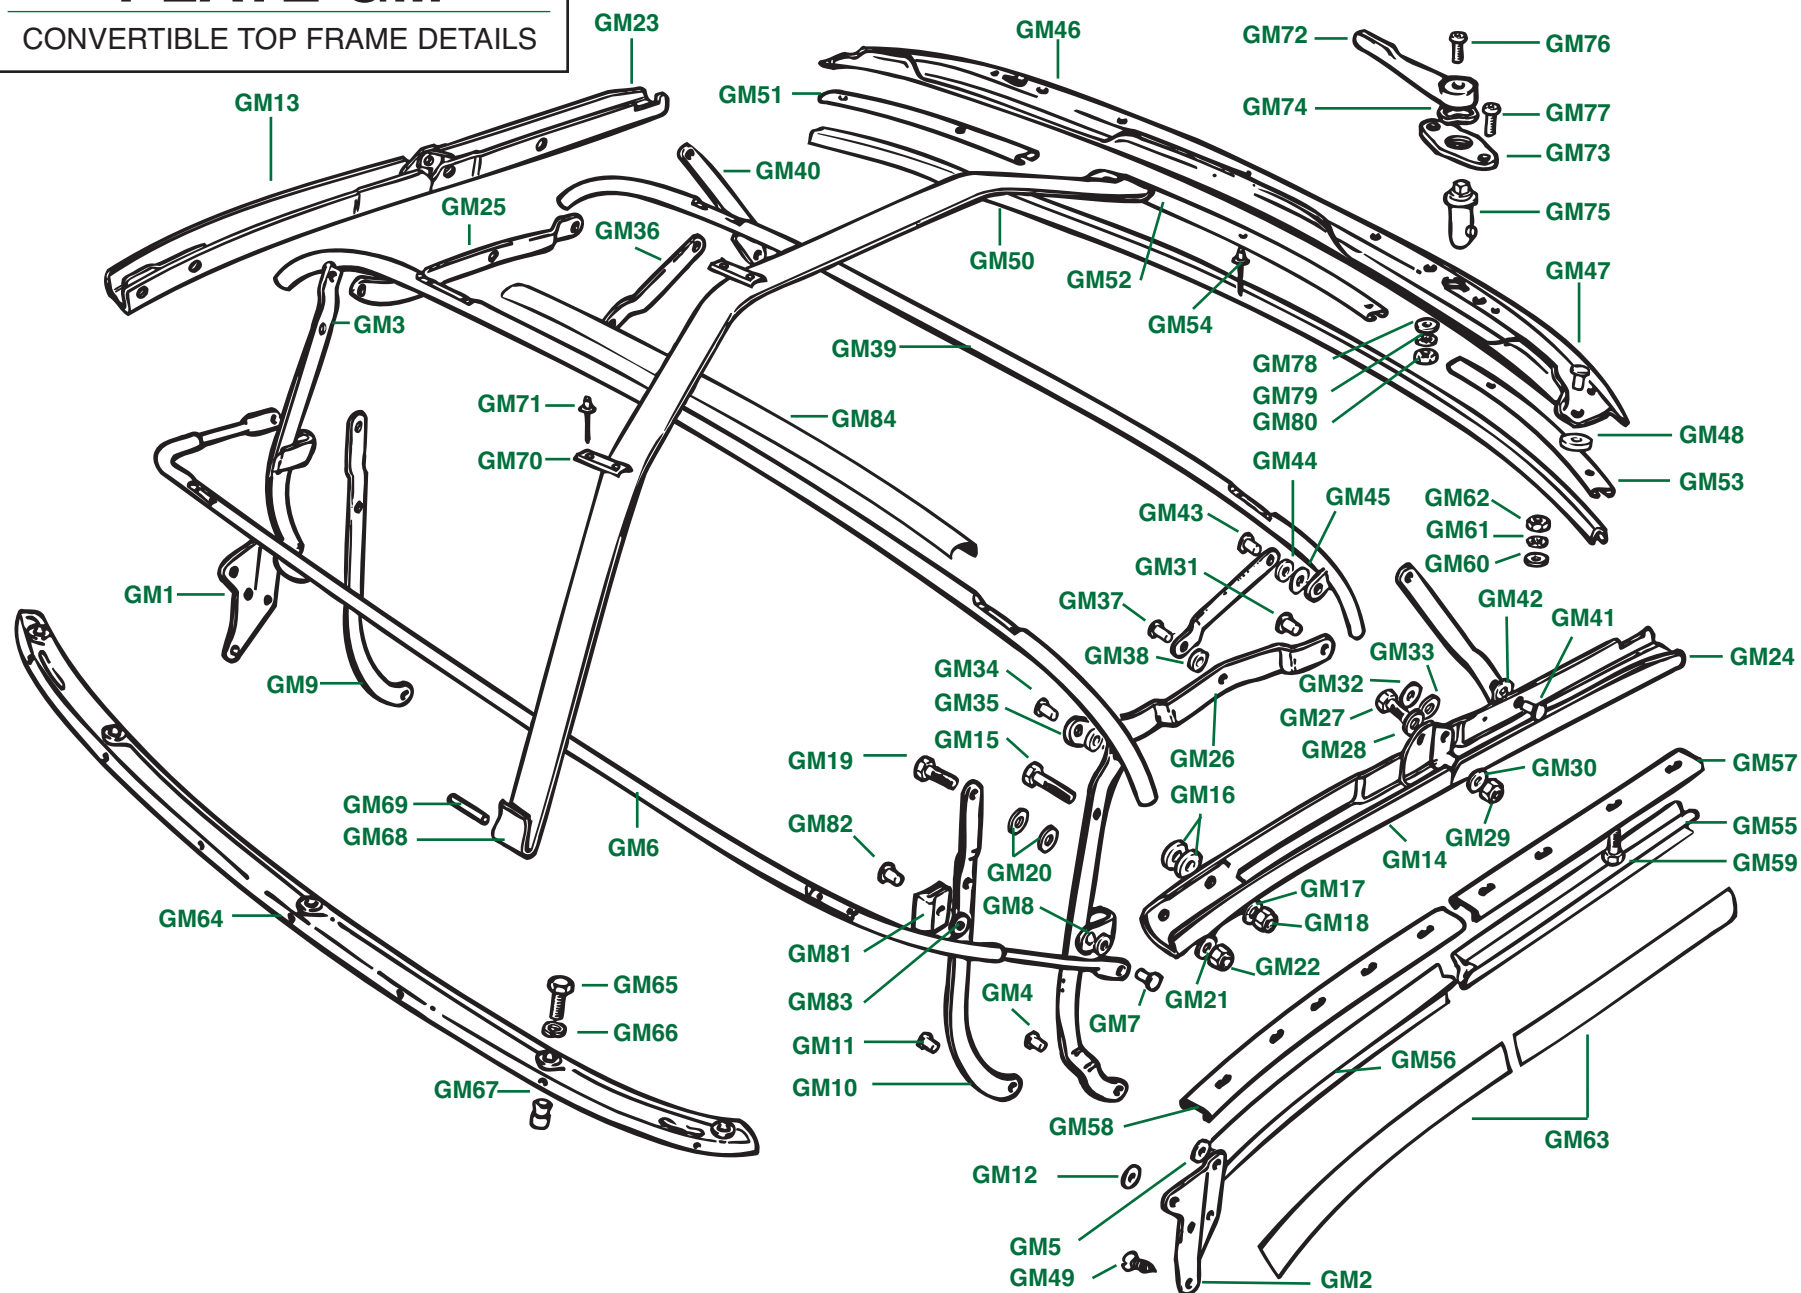


#



# PLATE GM

CONVERTIBLE TOP FRAME DETAILS

## TRIUMPH TR6

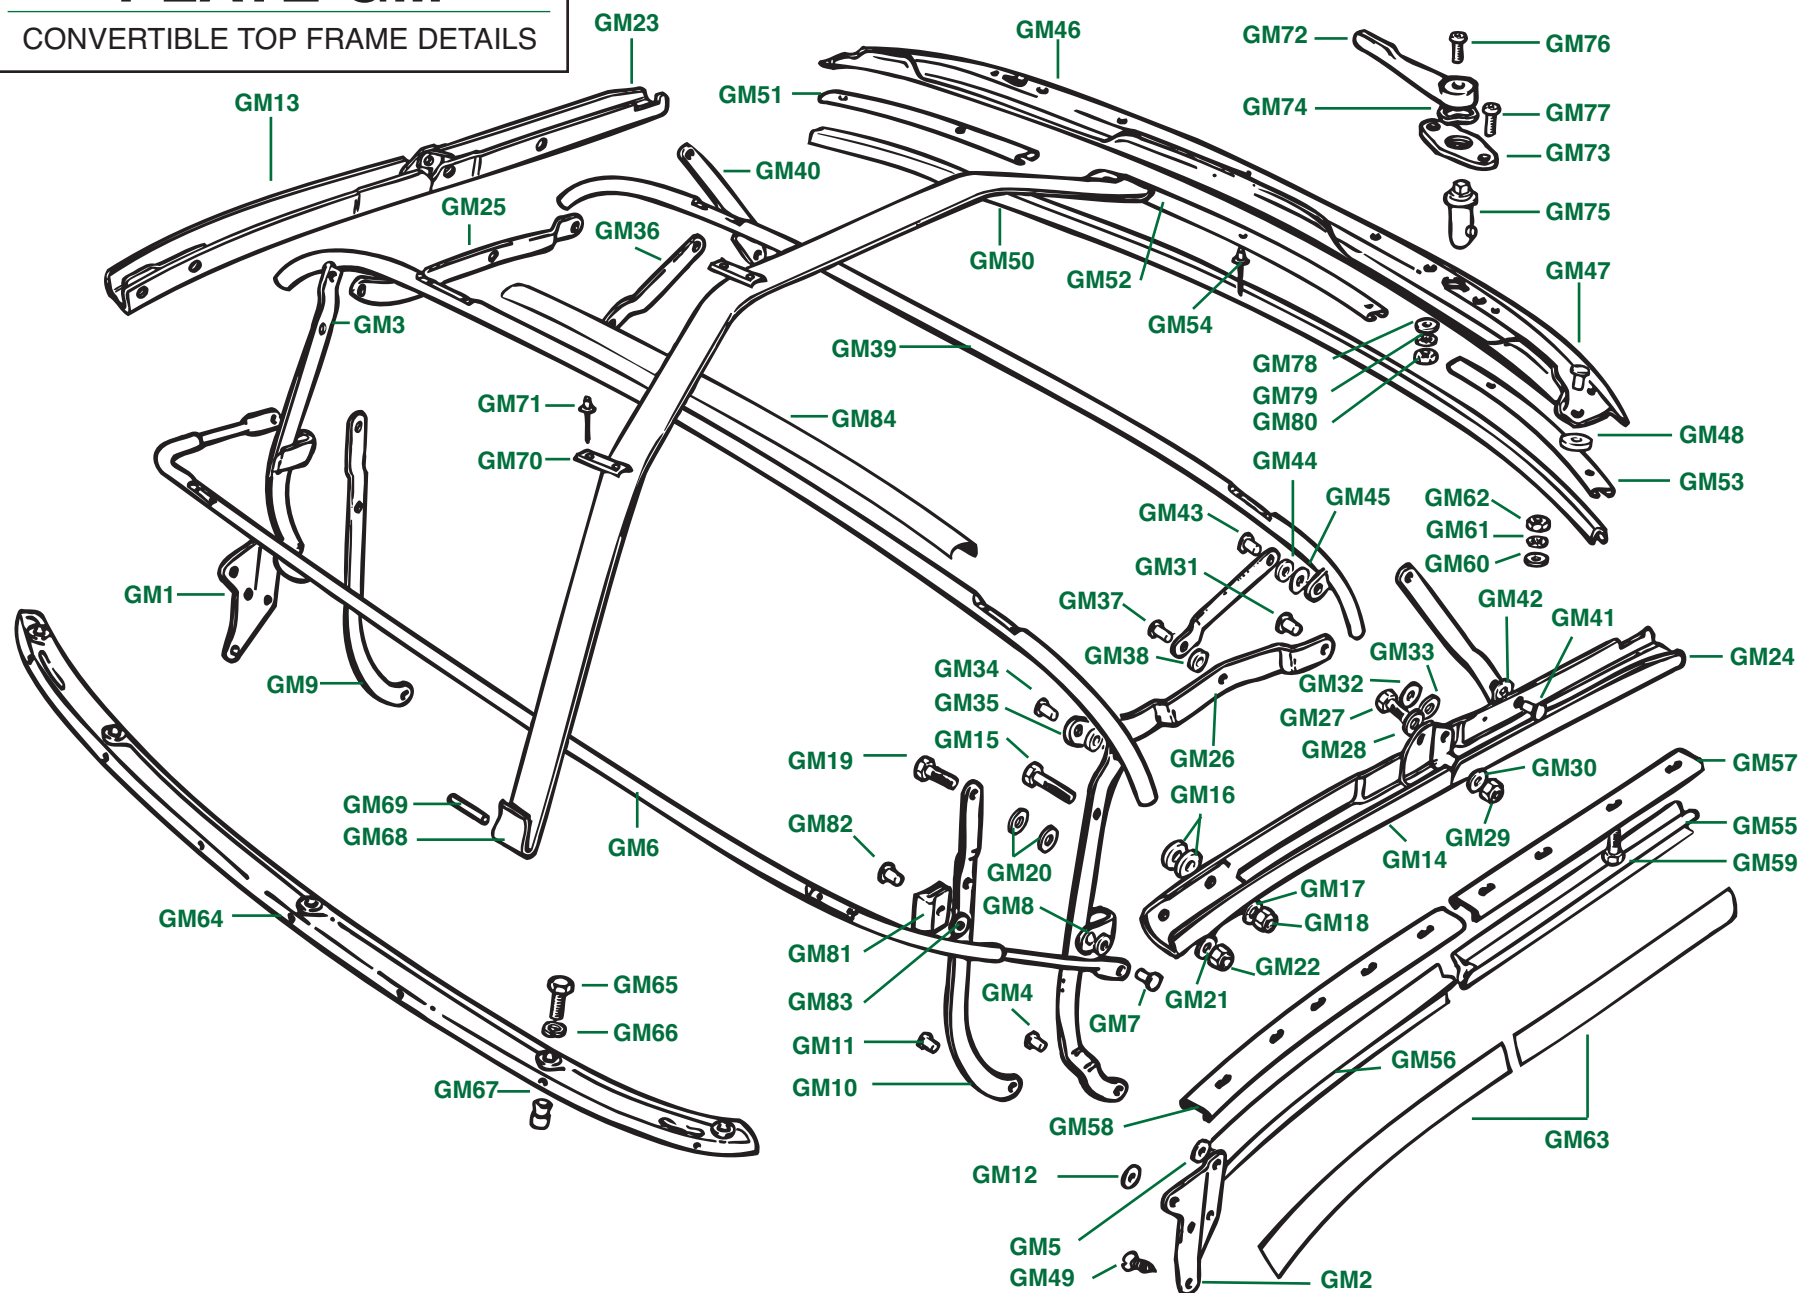


#

# PLATE GNB


SOFT-TOP STOWAGE COVERS  
—AKA CONVERTIBLE TOP BOOTS

## TRIUMPH TR6


GNB1

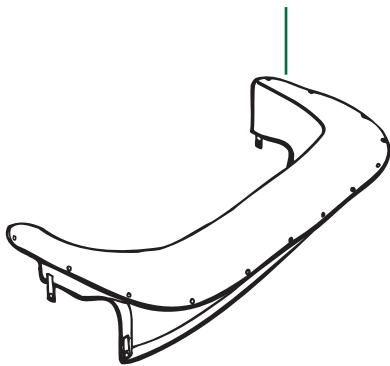


GNB2

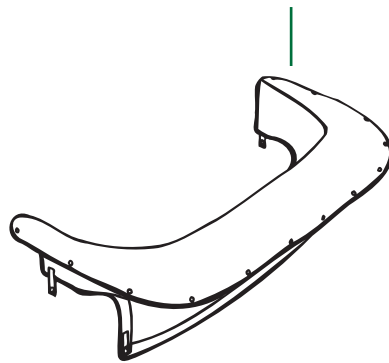


GNB3

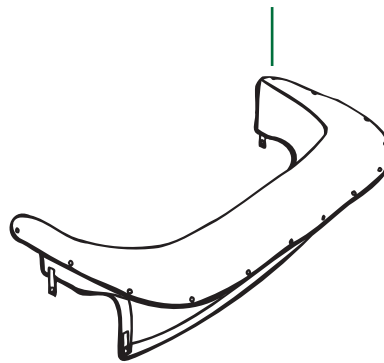


GNB4

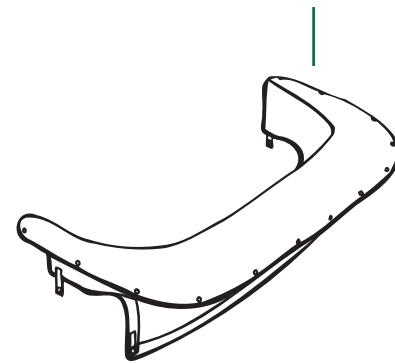


GNB5

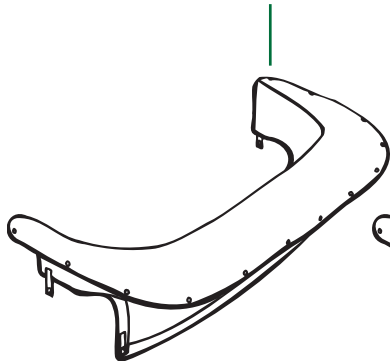


GNB6

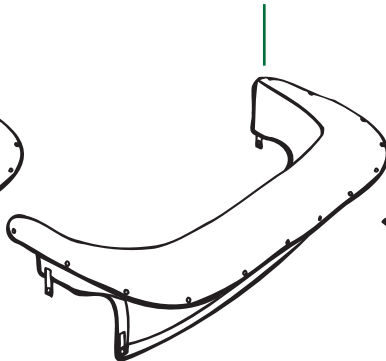


GNB7

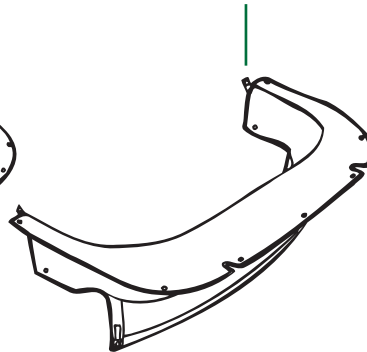

GNB8

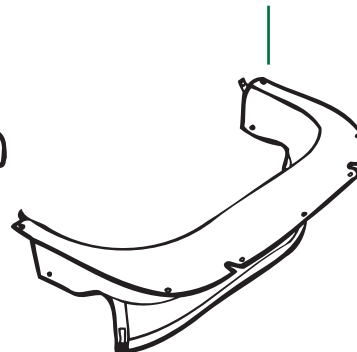

GNB9

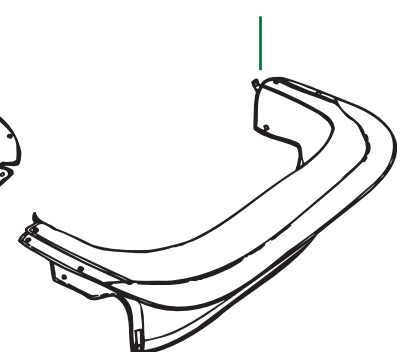

# SOFT-TOP STOWAGE COVERS—AKA CONVERTIBLE TOP BOOTS

Soft-top stowage covers, or convertible top boots as we often call them here in the U.S. were supplied by the factory to match interior colours on all TR6 models. Although convertible top boots matched interiors, they were made of outdoor material such as that used on convertible tops and tonneau covers. For companies currently manufacturing convertible top boots, there is a problem in matching interior colours with exterior grade vinyls. This problem is solved or not solved in various ways through the listings provided below.

The Triumph factory supplied convertible top boots of three types for the TR6, one for models with soft top and no hard top, one for models with both soft tops and hard tops for use in covering the folded soft top only when the hard top was also fitted to the car, and one that could be used for covering the soft top whether or not the hard top was fitted. At the present time, only the first of these three types is available, but it fulfills the needs of the vast majority of customers. For scholars, we are listing all of the original factory part numbers toward the end of this section...

Plate No.	Part No.	Description	No. Off
		<b>CONVERTIBLE TOP BOOTS</b> , manufactured by The Magic Carpet Factory for each order as it is received; note that custom details, such as special colours and materials can be provided—Please discuss any special needs not provided in the listings which follow...	
		<b>CONVERTIBLE TOP BOOTS</b> , made from Robbins top material to match Robbins-brand convertible tops; material samples available	
GNB1	726211/BLK	<b>Convertible Top Boot</b> , Robbins material, black	1
	726211/WHIT	<b>Convertible Top Boot</b> , Robbins material, white	1
	726211/TAN	<b>Convertible Top Boot</b> , Robbins material, khaki tan	1
	726211/BSQ	<b>Convertible Top Boot</b> , Robbins material, caramel tan; matches TR6 light tan interiors, 1969-70	1
		<b>CONVERTIBLE TOP BOOTS</b> , made from British Everflex top material, the finest vinyl top material available for British cars; material samples available	
GNB2	726211/EVBLK	<b>Convertible Top Boot</b> , Everflex, black; matches TR6 black interiors with stag grain vinyl, 1969-72	1
	726211/EVWHT	<b>Convertible Top Boot</b> , Everflex, white	1
	726211/EVTAN	<b>Convertible Top Boot</b> , Everflex, khaki tan	1
	726211/EVBSQ	<b>Convertible Top Boot</b> , Everflex, caramel tan; matches TR6 light tan interiors, 1969-70	1
	726211/EVRED	<b>Convertible Top Boot</b> , Everflex, red; matches TR6 matador red interiors with stag grain vinyl, 1969-72	1
	726211/EVBLU	<b>Convertible Top Boot</b> , Everflex, navy blue	1
	726211/EVGRN	<b>Convertible Top Boot</b> , Everflex, green	1
	726211/EVMRN	<b>Convertible Top Boot</b> , Everflex, maroon	1
	726211/EVCRM	<b>Convertible Top Boot</b> , Everflex, cream	1
	726211/EVGRY	<b>Convertible Top Boot</b> , Everflex, grey	1
	726211/EVBRN	<b>Convertible Top Boot</b> , Everflex, dark brown	1

Plate No.	Part No.	Description	No. Off
		<b>CONVERTIBLE TOP BOOTS</b> , made from interior vinyl in TR6 interior colours; these components are internally reinforced during manufacture, but they will not be as durable as those made from exterior materials; material samples available	
GNB3	726211/BLKIVS	<b>Convertible Top Boot</b> , black interior vinyl with stag grain, 1969-72; note that the black Everflex boot listed above is a better choice	1
GNB3	726211/IVBLKL	<b>Convertible Top Boot</b> , black interior vinyl with longhorn grain, 1973-76	1
	726211/IVBRD	<b>Convertible Top Boot</b> , bright red interior vinyl with stag grain, 1969-72	1
	726211/IVMTR	<b>Convertible Top Boot</b> , matador red interior vinyl with stag grain, 1969-72; note that the red Everflex boot listed above is a better choice	1
	726211/IVSBL	<b>Convertible Top Boot</b> , shadow blue interior vinyl with stag grain, 1969-72	1
	726211/IVSBL	<b>Convertible Top Boot</b> , shadow blue interior vinyl with longhorn grain, 1973-76	1
	726211/IVNTNS	<b>Convertible Top Boot</b> , new tan interior vinyl with stag grain, 1970-72	1
	726211/IVNTNL	<b>Convertible Top Boot</b> , new tan interior vinyl with longhorn grain, 1973-76	1
	726211/IVCTN	<b>Convertible Top Boot</b> , chestnut interior vinyl, 1973-76	1
	726211/IVBGE	<b>Convertible Top Boot</b> , beige interior vinyl, 1975-76	1
		<b>CONVERTIBLE TOP BOOTS</b> , made from Sunfast canvas top material; material samples available	
GNB4	726211/SFBLK	<b>Convertible Top Boot</b> , Sunfast, black	1
	726211/SFBRN	<b>Convertible Top Boot</b> , Sunfast, brown	1
	726211/SFTAN	<b>Convertible Top Boot</b> , Sunfast, tan	1
	726211/SFSND	<b>Convertible Top Boot</b> , Sunfast, sand	1
	726211/SFRDB	<b>Convertible Top Boot</b> , Sunfast, redberry	1
	726211/SFBLU	<b>Convertible Top Boot</b> , Sunfast, navy blue	1
	726211/SFGRY	<b>Convertible Top Boot</b> , Sunfast, grey	1
	726211/SFCHR	<b>Convertible Top Boot</b> , Sunfast, charcoal grey	1


(Continued on next page.)

# PLATE GNB


SOFT-TOP STOWAGE COVERS—AKA  
CONVERTIBLE TOP BOOTS

## TRIUMPH TR6


GNB1

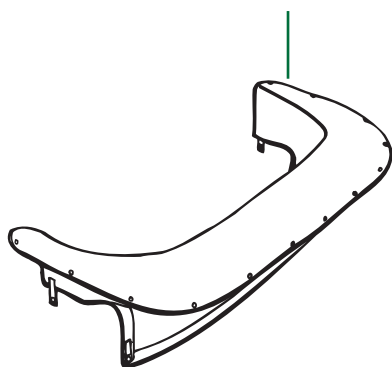


GNB2

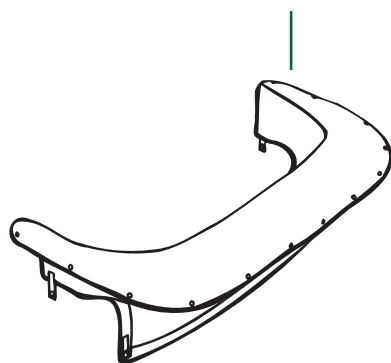


GNB3

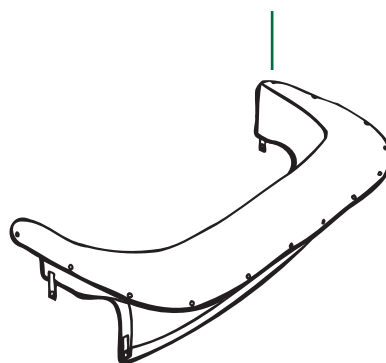


GNB4

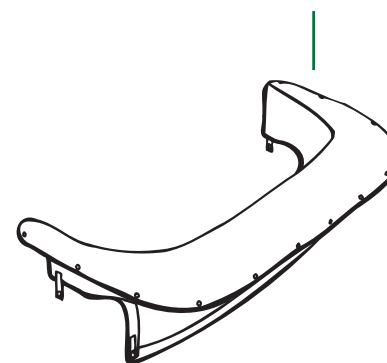


GNB5

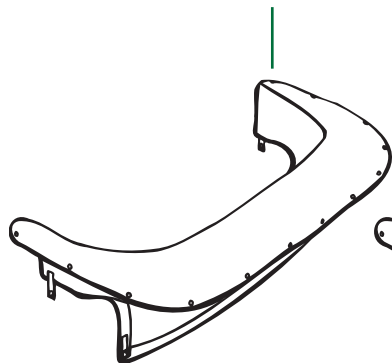


GNB6

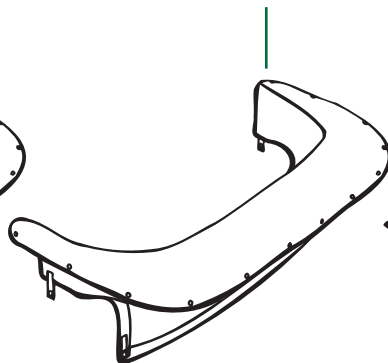


GNB7

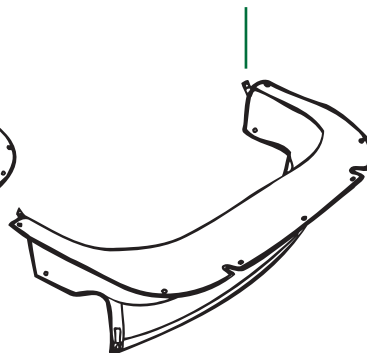

GNB8

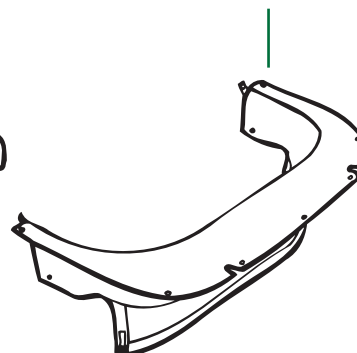

GNB9

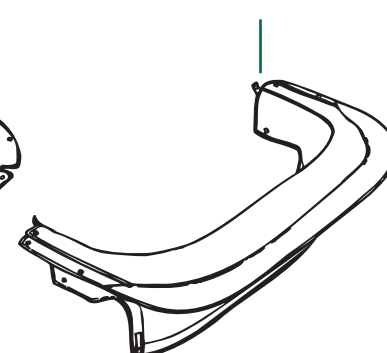



# SOFT-TOP STOWAGE COVERS—AKA CONVERTIBLE TOP BOOTS


Plate No.	Part No.	Description	No. Off
		<b>CONVERTIBLE TOP BOOTS</b> , original factory listings; provided here for information and not for ordering; for ordering please use the listings provided above...	
		<b>CONVERTIBLE TOP BOOTS</b> ; models with soft top only and no hard top, listed for models with comm. nos. up to CF1 and CR1	
GNB5	717191	<b>Convertible Top Boot</b> , black	1
	717192	<b>Convertible Top Boot</b> , matador red	1
	717193	<b>Convertible Top Boot</b> , light tan	1
	723093	<b>Convertible Top Boot</b> , new tan	1
	717197	<b>Convertible Top Boot</b> , shadow blue	1
		<b>CONVERTIBLE TOP BOOTS</b> ; models with soft top only and no hard top, listed for models with comm. nos. after CF1 and CR1	
GNB6	726211	<b>Convertible Top Boot</b> , black	1
	726003	<b>Convertible Top Boot</b> , new tan	1
	726213	<b>Convertible Top Boot</b> , chestnut	1
	726217	<b>Convertible Top Boot</b> , shadow blue	1
	726214	<b>Convertible Top Boot</b> , beige	1
		<b>CONVERTIBLE TOP BOOTS</b> ; models with both soft top and hard top, for use in covering the soft top only when the hard top is also on the car, listed for models with comm. nos. up to CF1 and CR1	
GNB7	717561	<b>Convertible Top Boot</b> , black	1
	717562	<b>Convertible Top Boot</b> , matador red	1
	717563	<b>Convertible Top Boot</b> , light tan	1
	723113	<b>Convertible Top Boot</b> , new tan	1
	717567	<b>Convertible Top Boot</b> , shadow blue	1

Plate No.	Part No.	Description	No. Off
		<b>CONVERTIBLE TOP BOOTS</b> , original factory listings; —Continued	
		<b>CONVERTIBLE TOP BOOTS</b> ; models with both soft top and hard top, for use in covering the soft top only when the hard top is also on the car, listed for models with comm. nos. after CF1 and CR1 and up to CF12500 and CR5000	
GNB8	726231	<b>Convertible Top Boot</b> , black	1
	726023	<b>Convertible Top Boot</b> , new tan	1
	726233	<b>Convertible Top Boot</b> , chestnut	1
	726237	<b>Convertible Top Boot</b> , shadow blue	1
		<b>CONVERTIBLE TOP BOOTS</b> ; models with both soft top and hard top; this type may be converted for covering the soft top whether or not the hard top is also on the car, listed for models with comm. nos. after CF12500 and CR5000	
GNB9	824851	<b>Convertible Top Boot</b> , black	1
	824863	<b>Convertible Top Boot</b> , new tan	1
	824853	<b>Convertible Top Boot</b> , chestnut	1
	824857	<b>Convertible Top Boot</b> , shadow blue	1
	824854	<b>Convertible Top Boot</b> , beige	1
		<b>REPLACEMENT SNAPS AND FITTINGS</b> , for convertible top boots—These are listed along with tonneau covers on Plate GNT, pages 470 and 471.	

# PLATE GNT

TONNEAU COVERS

## TRIUMPH TR6

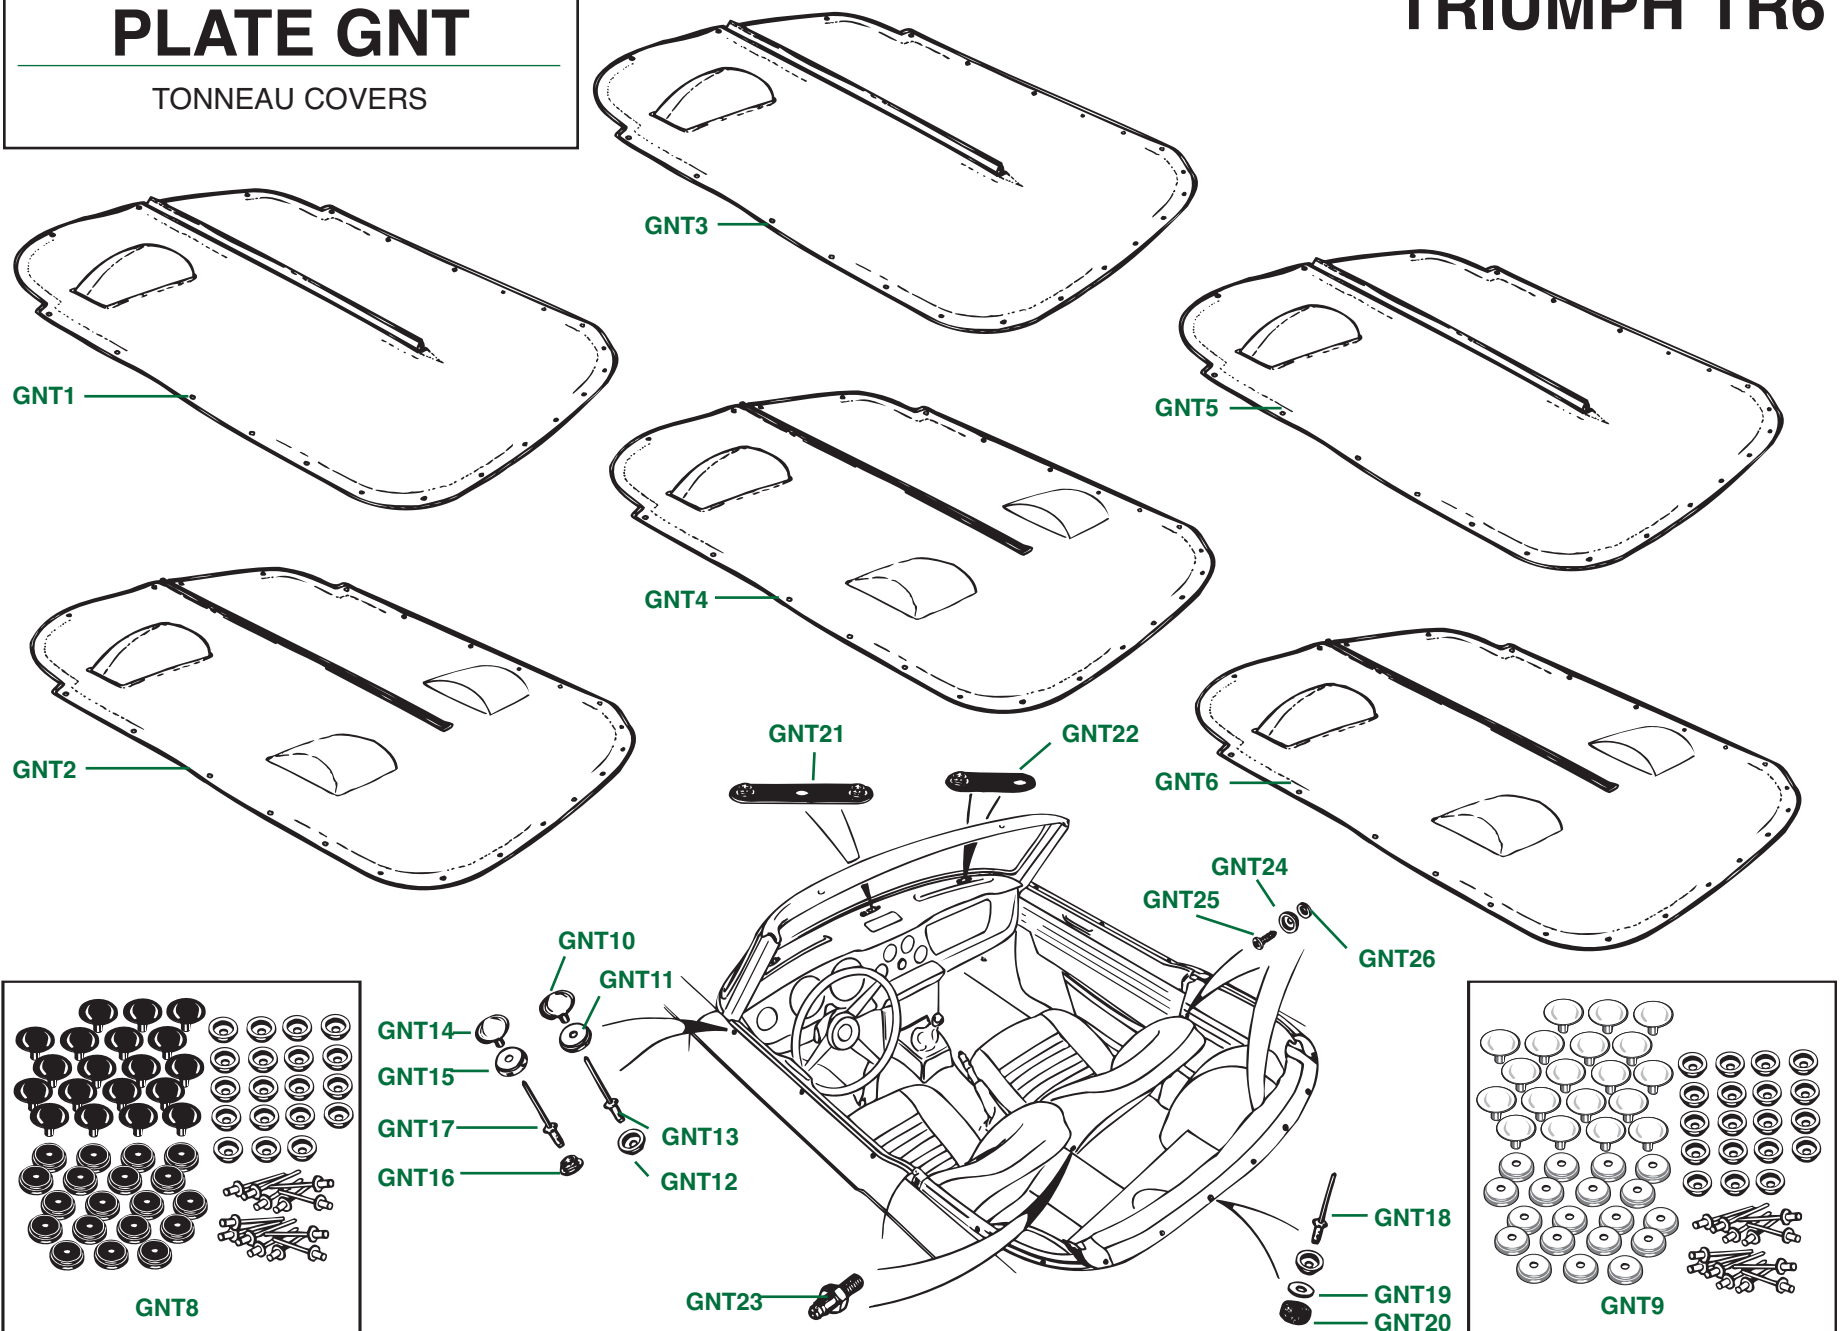

# TONNEAU COVERS

Triumph supplied tonneau covers for TR6 models in black and white only. The listings for tonneau covers in the factory catalogues are somewhat confusing. Early TR6 tonneau covers may have had tan backing, but later tonneau covers were marked on the back with the familiar markings for fire-proof material. Later tonneau covers had little flaps over the zippers to keep them from leaking in the rain. I am not sure if early tonneau covers included this feature. I believe that all TR6 factory tonneau covers were fitted with a strap on the passenger's side which secured to a snap on the seat to keep the tonneau cover from flapping in the wind if the car was driven with the passenger's side still snapped in place.

The Roadster Factory supplies Robbins brand tonneau covers. Robbins tonneau covers are very nice, but they do not have the zipper protection flaps or the strap described above. We may begin offering an alternative tonneau cover of our own manufactured by The Magic Carpet Factory in British Everflex material as time goes on. These will include all of the features of the original factory tonneau covers, but they will supplement rather than replace the range of Robbins brand tonneau covers listed in this section.

Plate No.	Part No.	Description	No. Off
		<b>TONNEAU COVERS</b> , U.S. models; original factory part numbers; these are provided for reference, but they are no longer available from any source	
	819531	<b>Tonneau Cover</b> , black, fitted up to comm. no. CF1	1
	819539	<b>Tonneau Cover</b> , white, fitted up to comm. no. CF1	1
GNT1	822101	<b>Tonneau Cover</b> , black, fitted after comm. no. CF1	1
	822109	<b>Tonneau Cover</b> , white, fitted after comm. no. CF1	1
		<b>TONNEAU COVERS—CURRENT LISTINGS</b>	
		<b>TONNEAU COVERS</b> , U.S. models; manufactured from Robbins top material; material samples available	
		<b>TONNEAU COVERS</b> , for models having seats with folding headrests, 1969-70	
GNT1	RBTC1207/AB	<b>Tonneau Cover</b> , Robbins material, black	1
	RBTC1207/AW	<b>Tonneau Cover</b> , Robbins material, white	1
	RBTC1207/AT	<b>Tonneau Cover</b> , Robbins material, khaki tan	1
	RBTC1207/AQ	<b>Tonneau Cover</b> , Robbins material, caramel tan	1
		<b>TONNEAU COVERS</b> , for models requiring headrest pockets in tonneau cover, 1970-76	
GNT2	RBTC1207/AB	<b>Tonneau Cover</b> , Robbins material, black	1
	RBTC1207/AW	<b>Tonneau Cover</b> , Robbins material, white	1
	RBTC1207/AT	<b>Tonneau Cover</b> , Robbins material, khaki tan	1
	RBTC1207/AQ	<b>Tonneau Cover</b> , Robbins material, caramel tan	1


Plate No.	Part No.	Description	No. Off
		<b>TONNEAU COVERS—CURRENT LISTINGS</b> —Continued	
		<b>TONNEAU COVERS</b> , U.S. models; manufactured from British Everflex material, the finest vinyl top material available for British cars; material samples available	
		<b>TONNEAU COVERS</b> , for models having seats with folding headrests, 1969-70	
GNT3	RBTC1207/EVBLK	<b>Tonneau Cover</b> , Everflex, black	1
	RBTC1207/EVWHT	<b>Tonneau Cover</b> , Everflex, white	1
	RBTC1207/EVTAN	<b>Tonneau Cover</b> , Everflex, khaki tan	1
	RBTC1207/EVBSQ	<b>Tonneau Cover</b> , Everflex, caramel tan	1
	RBTC1207/EVRED	<b>Tonneau Cover</b> , Everflex, red	1
	RBTC1207/EVBLU	<b>Tonneau Cover</b> , Everflex, navy blue	1
	RBTC1207/EVGRY	<b>Tonneau Cover</b> , Everflex, grey	1
		<b>TONNEAU COVERS</b> , for models requiring headrest pockets in tonneau cover, 1970-76	
GNT4	RBTC1207/AEVBLK	<b>Tonneau Cover</b> , Everflex, black	1
	RBTC1207/AEVWHT	<b>Tonneau Cover</b> , Everflex, white	1
	RBTC1207/AEVTAN	<b>Tonneau Cover</b> , Everflex, khaki tan	1
	RBTC1207/AEVBSQ	<b>Tonneau Cover</b> , Everflex, caramel tan	1
	RBTC1207/AEVRED	<b>Tonneau Cover</b> , Everflex, red	1
	RBTC1207/AEVBLU	<b>Tonneau Cover</b> , Everflex, navy blue	1
	RBTC1207/AEVGRY	<b>Tonneau Cover</b> , Everflex, grey	1
		<b>TONNEAU COVERS</b> , U.S. models; manufactured from Sunfast canvas top material; material samples available	
		<b>TONNEAU COVERS</b> , for models having seats with folding headrests, 1969-70	
GNT5	RBTC1207/SFBLK	<b>Tonneau Cover</b> , Sunfast, black	1
	RBTC1207/SFBRN	<b>Tonneau Cover</b> , Sunfast, brown	1
	RBTC1207/SFTAN	<b>Tonneau Cover</b> , Sunfast, tan	1
	RBTC1207/SFSND	<b>Tonneau Cover</b> , Sunfast, sand	1
	RBTC1207/SFRDB	<b>Tonneau Cover</b> , Sunfast, redberry	1
	RBTC1207/SFBLU	<b>Tonneau Cover</b> , Sunfast, navy blue	1
	RBTC1207/SFGRY	<b>Tonneau Cover</b> , Sunfast, grey	1
	RBTC1207/SFCHR	<b>Tonneau Cover</b> , Sunfast, charcoal	1
		<b>TONNEAU COVERS</b> , for models requiring headrest pockets in tonneau cover, 1970-76	
GNT6	RBTC1207/ASFBLK	<b>Tonneau Cover</b> , Sunfast, black	1
	RBTC1207/ASFRN	<b>Tonneau Cover</b> , Sunfast, brown	1
	RBTC1207/ASFTAN	<b>Tonneau Cover</b> , Sunfast, tan	1
	RBTC1207/ASFSD	<b>Tonneau Cover</b> , Sunfast, sand	1
	RBTC1207/ASFRDB	<b>Tonneau Cover</b> , Sunfast, redberry	1
	RBTC1207/ASFBLU	<b>Tonneau Cover</b> , Sunfast, navy blue	1
	RBTC1207/ASFGRY	<b>Tonneau Cover</b> , Sunfast, grey	1
	RBTC1207/ASFCHR	<b>Tonneau Cover</b> , Sunfast, charcoal	1

(Continued on next page.)

# PLATE GNT

TONNEAU COVERS

TRIUMPH TR6

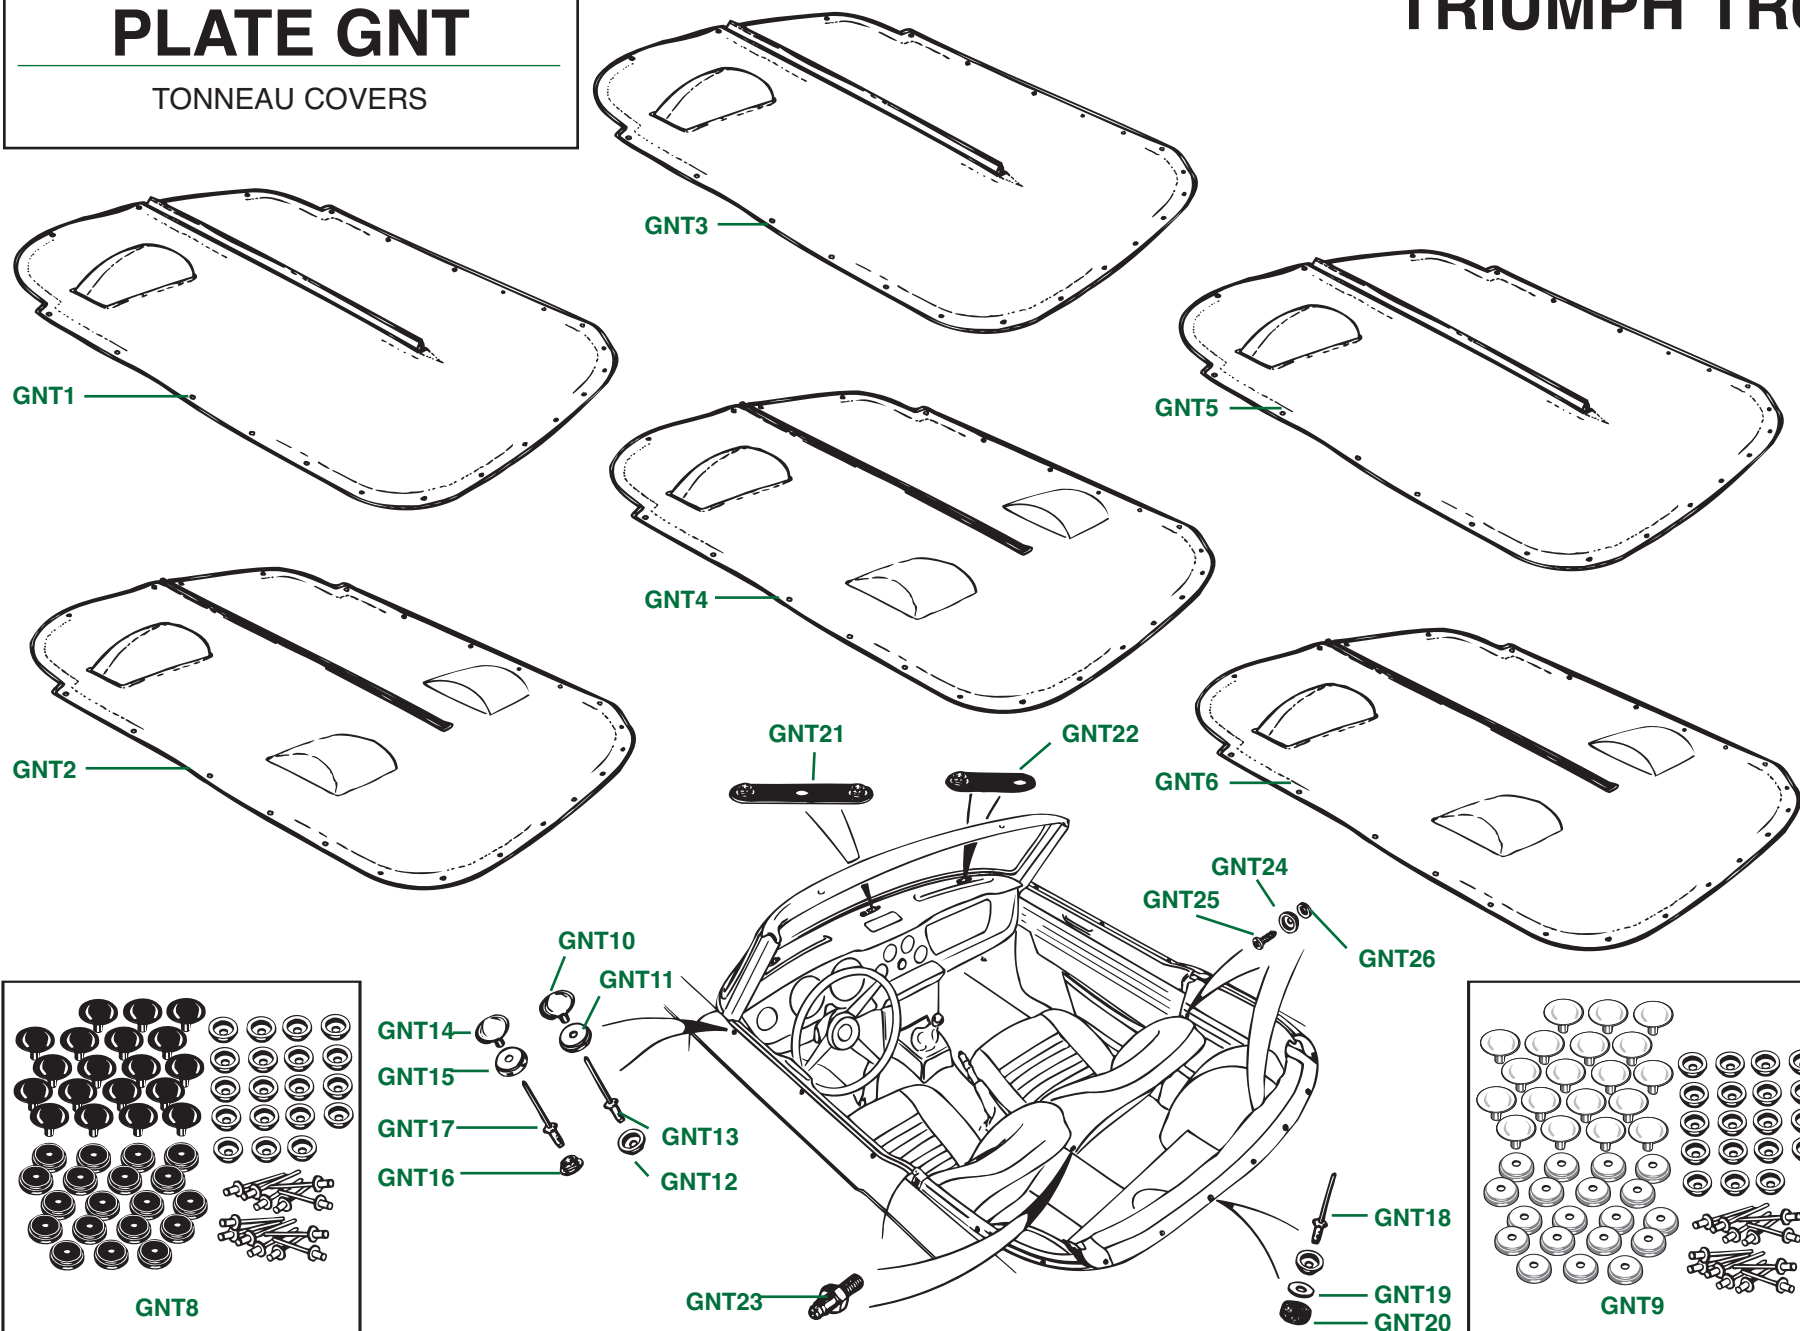

# TONNEAU COVERS

Plate No.	Part No.	Description	No. Off
<b>TONNEAU COVERS—CURRENT LISTINGS</b> —Continued			
<b>HARDWARE AND FITTINGS</b> , securing stowage covers and tonneau covers to the car			
GN8	RFK1127	<b>BLACK FASTENER KIT</b> ; for installing tonneau covers; includes black plastic snap buttons and studs, plus rivets, washers, and pads; buy this kit if you prefer to use original plastic snaps on your new tonneau cover	1
GN9	RFK1514	<b>WHITE FASTENER KIT</b> ; for installing tonneau covers; includes white plastic snap buttons and studs, plus black snap sockets, rivets, washers, and pads; buy this kit if you prefer to use original snaps on your new tonneau cover	1
<b>PLASTIC SNAP COMPONENTS</b> ; original type			
GN10	ZKC751	<b>Button</b> , snap, black	A/R
GN11	713499	<b>Button</b> , snap, white	A/R
	713501	<b>Socket</b> , snap, black	A/R
	713509	<b>Socket</b> , snap, white	A/R
GN12	713511	<b>Stud</b> , snap, black	A/R
	713519	<b>Stud</b> , snap, white	A/R
GN13	554407	<b>Rivet</b> , Imex, securing studs	A/R
<b>METAL SNAP COMPONENTS</b> , nickel plated; not original type			
GN14	565747	<b>Button</b> , snap	A/R
GN15	565642	<b>Socket</b> , snap	A/R
GN16	565746	<b>Stud</b> , snap	A/R
GN17	561210	<b>Rivet</b> , Imex, securing studs	A/R
<b>HARDWARE AND FITTINGS</b> , securing snap studs to rear of soft top and steel angle			
GN18	574437	<b>Rivet</b> , Imex, securing snap studs	7
GN19	509563	<b>Washer</b> , plain, under steel angle	7
GN20	622445	<b>Pad</b> , protection, cemented under rivet ends to protect body paint	7
<b>ADDITIONAL FITTINGS</b> , securing tonneau cover to car			
GN21	617297	<b>Bracket</b> and Stud Assembly, center	1
GN22	617298	<b>Bracket</b> and Stud Assembly, outer	2
<b>ADDITIONAL FITTINGS</b> , securing stowage cover to interior rear bulkhead panel and to rear quarter trim panels			
GN23	565752	<b>Stud</b> , lift-the-dot, securing strap on original-equipment tonneau cover, fitted to passenger's seat frame	1
GN24	713511	<b>Stud</b> , snap	6
GN25	YZ3105	<b>Screw</b> , self-tapping, securing studs	6
GN26	512611	<b>Washer</b> , spacing, mounting under studs	6


Plate No.	Part No.	Description	No. Off
-----------	----------	-------------	---------



# PLATE GP

HARD TOP

## TRIUMPH TR6

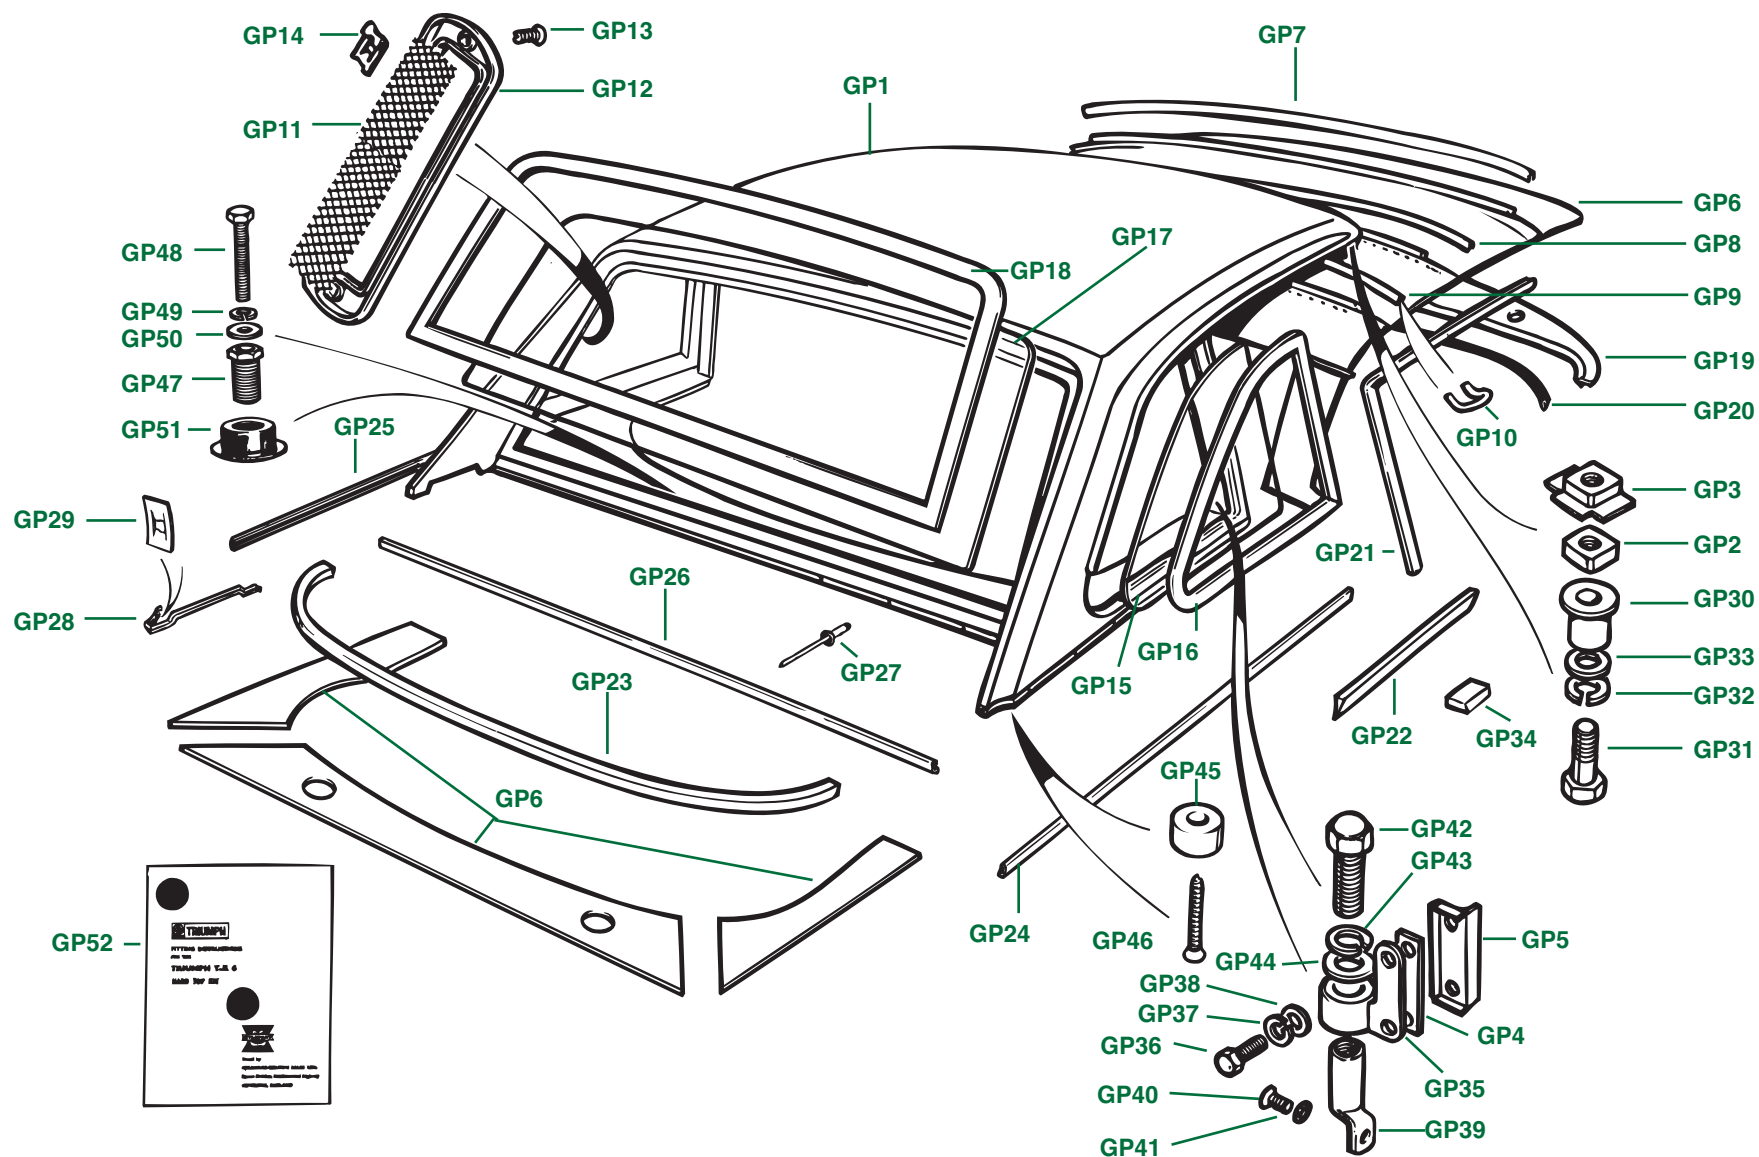

# HARD TOP

Plate No.	Part No.	Description	No. Off
		<b>HARD TOP KITS;</b> comprising components listed below; except as specified	
	575646/BLK	<b>HARD TOP KIT,</b> black headlining	1
	575646/WHT	<b>HARD TOP KIT,</b> off-white headlining	1
	575646/BGE	<b>HARD TOP KIT,</b> beige headlining	1
		<b>SHELLS,</b> hard top; supplied in primer with headlinings	
GP1	575645/BLK	<b>SHELL,</b> hard top, black headlining	1
	575645/WHT	<b>SHELL,</b> hard top, off-white headlining	1
	575645/BGE	<b>SHELL,</b> hard top, beige headlining	1
GP2	NQ2708	<b>Nut,</b> square, hard top attachment; part of shell	2
GP3	600032	<b>Retainer,</b> for square nuts; part of shell	2
GP4	625308	<b>Plate,</b> threaded, hard top attachment; part of shell	2
GP5	625310	<b>Retainer,</b> for R.H. threaded plate; part of shell	1
	625309	<b>Retainer,</b> for L.H. threaded plate; part of shell	1
		<b>HEADLINING DETAILS;</b> included with shell	
		<b>HEADLINING KITS,</b> including sewn headlining plus extra material for !covering rear and side edges and side window post	
GP6	RFK619/BLK	<b>Headlining Kit,</b> black	1
	RFK620/WHT	<b>Headlining Kit,</b> off-white	1
	RFK621/BGE	<b>Headlining Kit,</b> beige	1
		<b>LISTING RAILS,</b> supporting headlining	
GP7	716604	<b>Rail,</b> listing, front	1
GP8	716605	<b>Rail,</b> listing, center	1
GP9	716606	<b>Rail,</b> listing, rear	1
GP10	608307	<b>Clip,</b> securing listing rails to hard top !shell	6
		<b>AIR EXTRACTION DETAILS</b>	
GP11	622611	<b>Grille,</b> air extraction	2
GP12	626290	<b>Bezel,</b> air extraction grilles	2
		<b>HARDWARE,</b> securing grilles and bezels !to hard top shell	
GP13	509557	<b>Screw</b>	4
GP14	FJ2444	<b>Nut,</b> spire	4
		<b>GLASS AND GLAZING SEALS</b>	
GP15	819940	<b>Glass,</b> quarter window	2
GP16	815791	<b>Seal,</b> rubber, glazing, R.H. quarter window	1
	815790	<b>Seal,</b> rubber, glazing, L.H. quarter window	1
GP17	820390	<b>Glass,</b> rear window	1
GP18	815534	<b>Seal,</b> rubber, glazing, rear window	1


Plate No.	Part No.	Description	No. Off
		<b>HARD TOP KIT—Continued</b>	
		<b>WEATHER-SEALING DETAILS</b>	
GP19	806144	<b>Seal,</b> rubber, header rail; hard top to windscreen	1
GP20	626811	<b>Draught Excluder (Fuzzy Seal),</b> header rail	1
GP21	626911	<b>Draught Excluder (Fuzzy Seal),</b> window aperture, R.H.	1
	626901	<b>Draught Excluder (Fuzzy Seal),</b> window aperture, L.H.	1
GP22	626155	<b>Seal,</b> rubber, sides of hard top to rear deck	2
GP23	626156	<b>Seal,</b> rubber, hard top to rear deck	1
		<b>CHROMED FINISHING DETAILS</b>	
GP24	626421	<b>Strip,</b> trim, R.H.	1
GP25	626420	<b>Strip,</b> trim, L.H.	1
GP26	815877	<b>Strip,</b> trim, rear	1
GP27	575639	<b>Clip,</b> rivet, securing trim strips	14
GP28	716607	<b>Finisher,</b> rear corner, L.H.	1
	716608	<b>Finisher,</b> rear corner, R.H.	1
GP29	FP1051/4	<b>Fix,</b> spire, securing corner finishers	2
		<b>HARD TOP ATTACHING DETAILS</b>	
		<b>ATTACHING DETAILS,</b> hard top to windscreen	
GP30	613508	<b>Tube,</b> distance	2
GP31	622887	<b>Bolt,</b> domed	2
GP32	518052	<b>Washer,</b> lock	2
GP33	518051	<b>Washer,</b> plain	2
		<b>ATTACHING DETAILS,</b> hard top to body side	
GP34	614150	<b>Block,</b> rubber, between hard top and tops of rear door posts	2
GP35	625312	<b>Bracket,</b> mounting, R.H.	1
	625311	<b>Bracket,</b> mounting, L.H.	1
		<b>HARDWARE,</b> securing mounting brackets to hard top shell	
GP36	508206	<b>Screw,</b> set	4
GP37	518054	<b>Washer,</b> lock	4
GP38	518207	<b>Washer,</b> plain	4
GP39	625315	<b>Tie Bar,</b> body side mountings	2
		<b>HARDWARE,</b> securing tie bar to body side (to soft top frame mounting)	
GP40	518057	<b>Screw,</b> set	2
GP41	518053	<b>Washer,</b> plain	2
		<b>HARDWARE,</b> securing hard top to tie bar	
GP42	622886	<b>Bolt,</b> domed	2
GP43	518052	<b>Washer,</b> lock	2
GP44	518055	<b>Washer,</b> plain	2

(Continued on next page.)

# PLATE GP

HARD TOP

TRIUMPH TR6

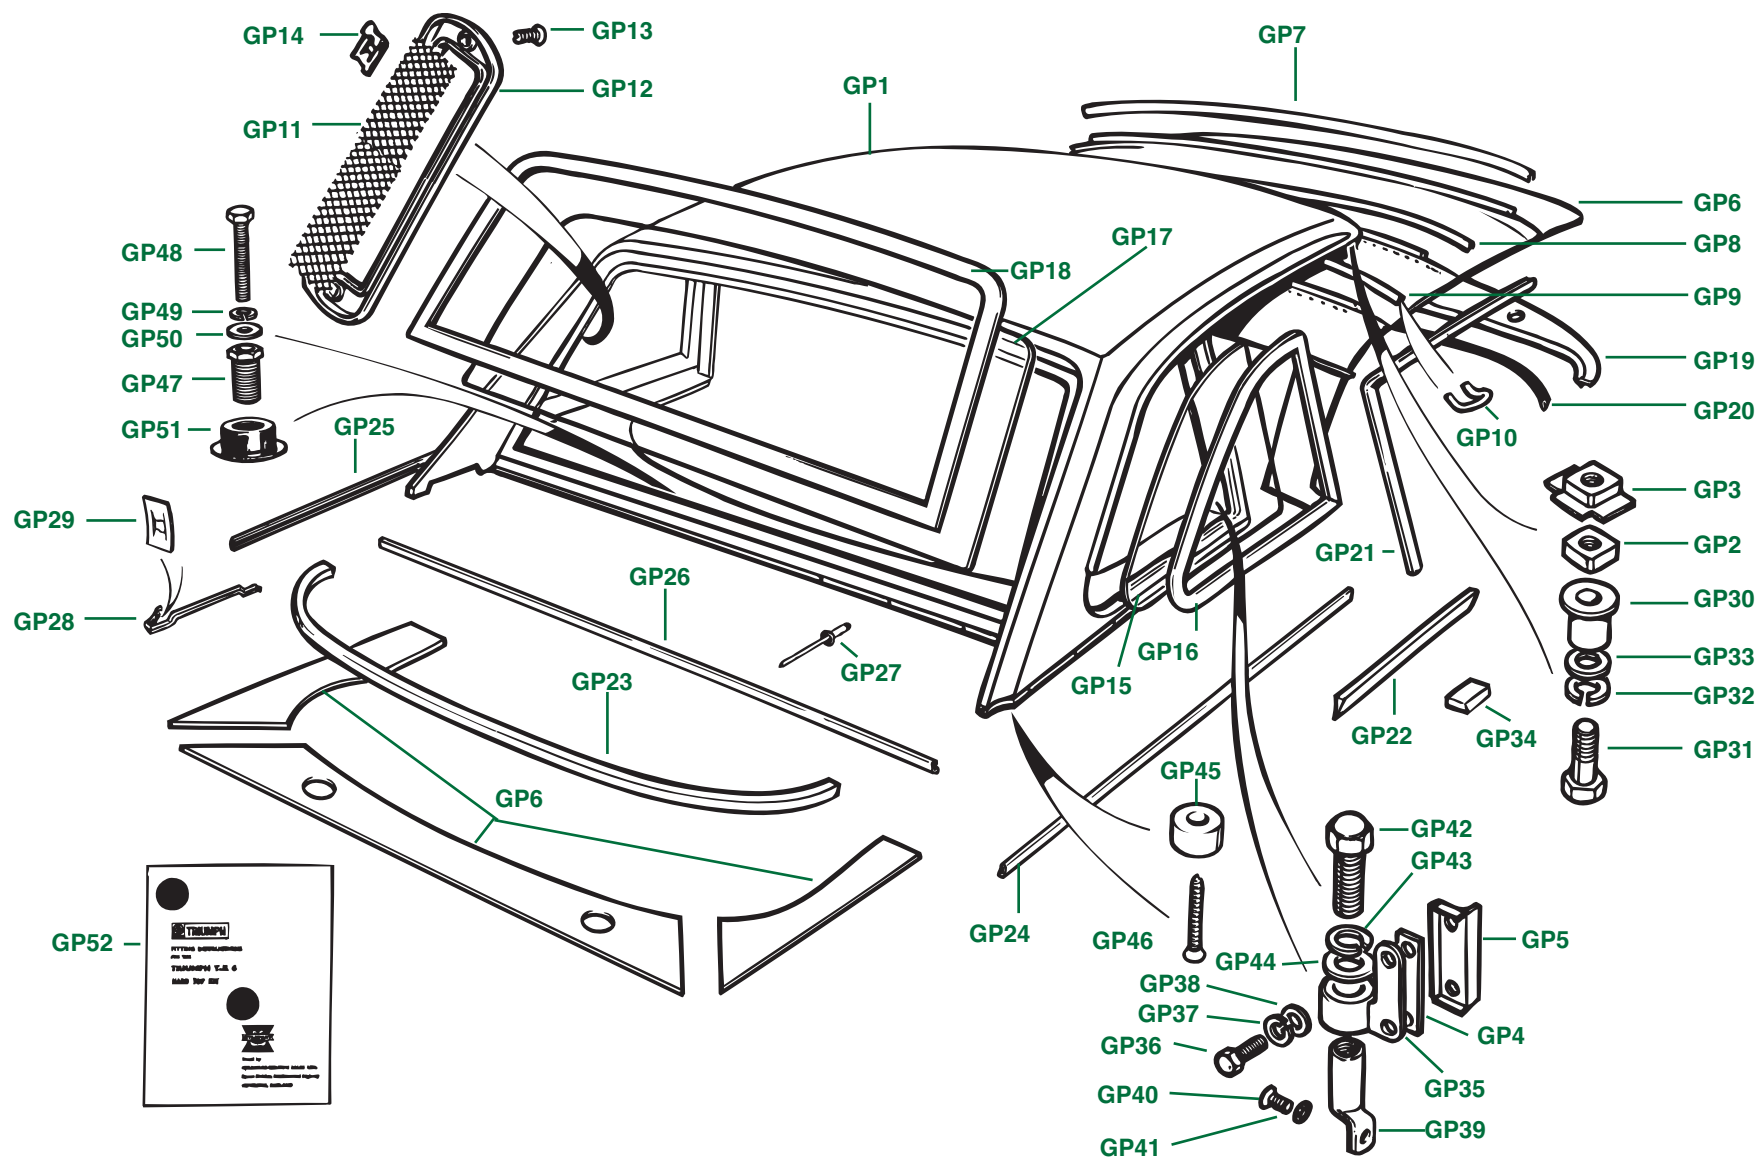

# HARD TOP

Plate No.	Part No.	Description	No. Off
		<b>HARD TOP KITS</b> —Continued	
		<b>HARD TOP ATTACHING DETAILS</b> —Continued	
		<b>ATTACHING DETAILS</b> , hard top to rear deck	
GP45	626899	<b>Buffer Assembly</b>	2
GP46	509912	<b>Screw</b> , set, securing buffers to hard top	2
GP47	626157	<b>Screw</b> , adjusting	2
GP48	518059	<b>Screw</b> , set	2
GP49	518054	<b>Washer</b> , lock	2
GP50	518053	<b>Washer</b> , plain	2
GP51	626576	<b>Cap</b> , finishing screw	2
GP52	RFP290	<b>Fitting Instructions</b> , for the TR6 hard top kit; reprint of an original factory publication	A/R
		<b>STOWAGE COVERS</b> , for convertible tops	
		<b>Please Note:</b> Special convertible top stowage covers (i.e. "Boots") are listed for cars having both hard tops and convertible tops. For these listings, see Section GN.	

Plate No.	Part No.	Description	No. Off
-----------	----------	-------------	---------